 


CHUNGHOP®

■ RM-L988

 
Operating Instruction

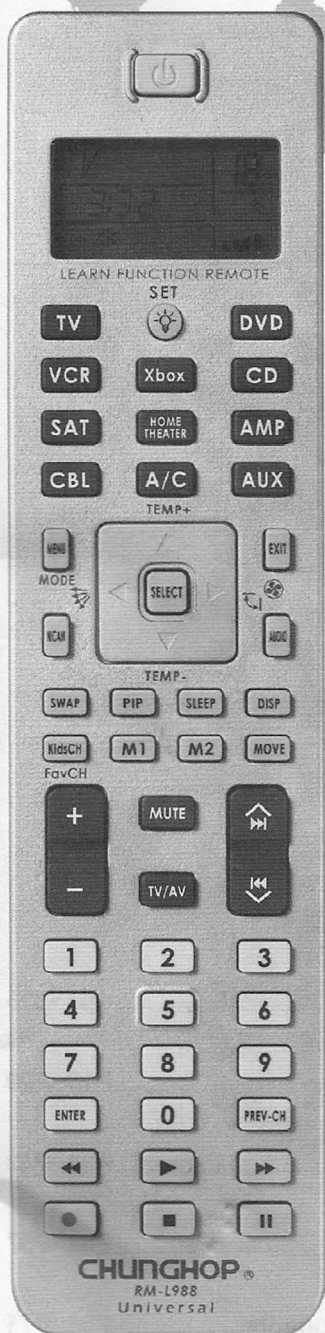

RM-L988

—— 1 IN 1 Universal Remote Controller

◎ Panel Explanation

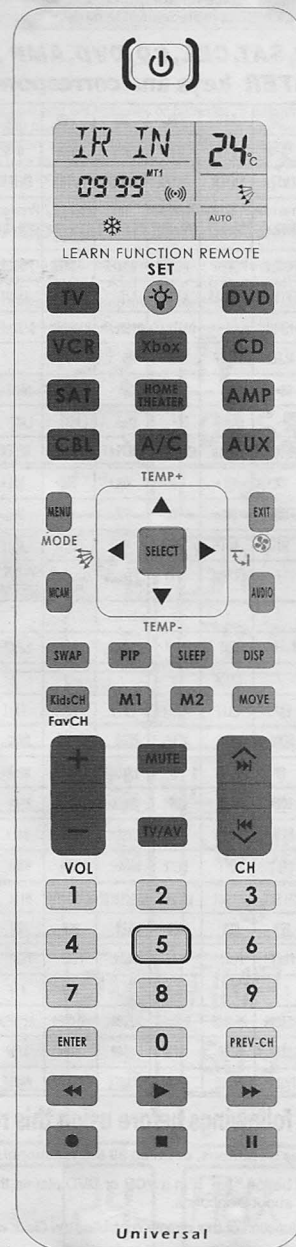

ENGLISHp1~p15

FRENCHP16~P29

SPAISHP30~P43

PORTUGALP44~P57

Cdoe form for the components.....P58~P71



Thanks for using this remote control! Please follow the steps below to set your remote control before use, and reserve the User Manual for future setting.

Product Profile

This is a combination type universal remote controller with LCD and learning function. Equipped with a powerful built-in code library and easily configured, it can perform remote control over various household appliances such as TV, VCR, SAT, CBL, XBOX, HOME THEATER, A/C, DVD, CD, AMP, AUX, and other infrared remote control device. It is provided with many functions: learning, permanent memory, macroinstruction, button shifting, clock, kids channel, favorite channel, pushbutton sound, back light, volume sharing, Celsius-Fahrenheit switching, power shortage prompt, and factory default restoring, etc. Its operation is simple and pragmatic, and it is an ideal choice for all-in-one remote control for various household appliances as well as replacement in case of loss and damage.

A/C, TV, VCR, SAT, CBL, CD, DVD, AMP, XBOX, AUX, HOMETHEATER keys and corresponding functions


RM-11888	A/C	TV	VCR	SAT	CBL	CD	DVD	AMP	XBOX	AUX	HOMETHEATER
1. 0-9	0-9	0-9	0-9	0-9	0-9	0-9	0-9	0-9	0-9	0-9	0-9
2. ENTER	ENTER	ENTER	ENTER	ENTER	ENTER	ENTER	ENTER	100	ENTER	ENTER	ENTER
3. PREV-CH	Previous Channel	Previous Channel	Previous Channel	Previous Channel	10+	ENTER/ANGLE	Previous Channel	RETURN	RETURN	RETURN	RETURN
4. POWER	POWER	POWER	POWER	POWER	POWER	POWER	POWER	ON/OFF	POWER	POWER	POWER
5. TV/AV	TV/AV	TV/VCR	TV/SAT	A/B	A/B	N/P	INPUT	CLEAR	TV/VCR	TV/VCR	TV/VCR
6. DISPLAY	DISPLAY	DISPLAY	/	DISPLAY	DISPLAY	DISPLAY	DISPLAY	DISPLAY	INFO	INFO	INFO
7. SLEEP	SLEEP	SLEEP	SLEEP	SLEEP	SLEEP	/	/	/	INFO	SLEEP	SLEEP
8. CH+	CH+	CH+	CH+	CH+	CH+	NEXT	NEXT	CH+	CH+	CH+	CH+
9. CH-	CH-	CH-	CH-	CH-	CH-	LAST	LAST	CH-	CH-	CH-	CH-
10. MUTE	ADD/DELETE	ADD/DELETE	RADIO	ADD/DELETE	REPEAT	REPEAT	REPEAT	X	CC	CC	CC
11. VOL+	VOL+	VOL+	VOL+	VOL+	VOL+	VOL+	VOL+	VOL+	VOL+	VOL+	VOL+
12. VOL-	VOL-	VOL-	VOL-	VOL-	VOL-	VOL-	VOL-	VOL-	VOL-	VOL-	VOL-
13. MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE
14. PIP	PIP	/	VIEW	FAV	RANDOM	DISK/B	RANDOM/SURROUND	START	PIP	PIP	PIP
15. MOVE	MOVE	/	/	/	/	/	/	ENT	CHAP+	CHAP+	CHAP+
16. SNAP	SNAP	EJECT	NEXT	NEXT	EJECT	EJECT	EJECT	EJECT	TOGGLE	TOGGLE	TOGGLE
17. AUDIO	AUDIO	/	GUIDE	/	/	/	/	GUIDE	GUIDE	GUIDE	GUIDE
18. EXIT	EXIT	EXIT	EXIT	EXIT	EXIT	EXIT	EXIT	BACK	QUIT	QUIT	QUIT
19. MENU	MENU	MENU	MENU	MENU	MENU	PROG	MENU	PROG	DVD MENU	MENU	MENU
20. UP	Temp+	UP	UP	UP	UP	TRACK+	TRACK+	REAR+	UP	UP	UP
21. DOWN	Temp-	DOWN	DOWN	DOWN	DOWN	TRACK-	TRACK-	REAR-	DOWN	DOWN	DOWN
22. RIGHT	N. WING	RIGHT	RIGHT	RIGHT	RIGHT	DISK+	DISK+	BAL+	RIGHT	RIGHT	RIGHT
23. LEFT	N. WING	LEFT	LEFT	LEFT	LEFT	DISK-	DISK-	BAL-	LEFT	LEFT	LEFT
24. SELECT	SELECT	SELECT	SELECT	SELECT	SELECT/DISK	OK/CHAPTER	DISK	OK	OK	OK	OK
25. REM	REM	REM	REM	REM	REM	REM	REM	REM	REM	REM	REM
26. F.F	F.F	F.F	F.F	F.F	F.F	F.F	F.F	F.F	F.F	F.F	F.F
27. RECORD	RECORD	RECORD	RECORD	RECORD	RECORD	RECORD	RECORD	RECORD	RECORD	RECORD	RECORD
28. STOP	STOP	STOP	STOP	STOP	STOP	STOP	STOP	STOP	STOP	STOP	STOP
29. PAUSE	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE

Please note the followings before using this remote controller:

- This remote controller has 54 buttons, of which 39 are functional, and the rest 15 are not.
- When serving the record button "RECORD" in a VCR or DVD player, the record button "RECORD" needs to be pressed for about 2 seconds.
- After turning on the Learn function of this remote controller, the Clock will stop working; and you have to readjust the Clock after exercising the Learn function.
- Learn keys: when serving the A/C, seven keys can be used for Learning. When serving other home appliances, all the function keys can be used for Learning.
- As for the Learn code and Key Transfer code, be sure to put the same key in the same storage area when serving the same home appliance, so that the codes will cover each other. When serving the same home appliance, the same key cannot store the Learn code and the Key Transfer code concurrently.
- During your use of the Menu, if you don't press any key within 2~3 minutes, the system will withdraw from the menu. If you don't press any key within 5~6 minutes, the LCD will be turned off.

Install the batteries

 Open the battery trough cover, install three fire-new AAA batteries according to the +/- mark on the trough wall, as shown in the figure:

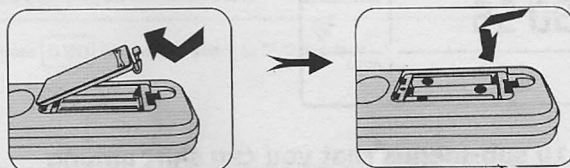

Precautions:



- Do not use new and old batteries or batteries of different models concurrently.
- In case of any liquid leakage from a battery, be sure to take the battery out, and clean the battery compartment trough before replacing it with a new battery.
- Be sure to take the batteries out before you are not going to use this remote controller for a long period of time.

11 kinds of operational interfaces

This remote controller has 11 different operational interfaces altogether for equipment: HTIB, TV, VCR, SAT, DVD, CD, CBL, AMP, XBOX, AUX, and A/C. Switching is realizable through pressing their respective equipment buttons.

HTIB	24°C	TV	24°C
024		0553	
	AUTO		AUTO
VCR	24°C	SAT	24°C
1022		2011	
	AUTO		AUTO
TV/D	24°C	CD	24°C
3003		4038	
	AUTO		AUTO
CBL	24°C	AMP	24°C
5002		6054	
	AUTO		AUTO
XBOX	24°C	AUX	24°C
7000		8015	
	AUTO		AUTO



10 sub-menus that you can shift among

Press the "SET" key for about 5 seconds, to enter the sub-menu settings. There are totally 10 sub-menus, press the "▶" or "◀" to shift among these sub-menus.



Settings on the remote controller

This remote controller can be set by three methods (A, B and C). You can opt for any one as you desire.

Code range: TV 0000~0874 VCR 1000~1276 SAT 2000~2392
 DVD 3000~3724 CD 4000~4276 CBL 5000~5266 AMP 6000~6161
 XB0X 7000 AUX 8000~8165 A/C 9000~9337 HTIB 000~033

 
A. Method of code entry

Find the brand of your home appliance to be controlled from the code list. Set for this brand from the first code, until you find the code for your home appliance. If all the codes cannot enable you to use the remote controller normally (or the brand of your home appliance is not in the code list), then go to use Method B or C.

1. Manually turn on the home appliance you are going to take remote control of, find the first code for your home appliance from the code list. For example: the DVD is branded SONY, the first code is 3036.


2. Press **DVD** key once to switch to DVD interface.

LCD:




3. Press the "SET" key for about 5 seconds, to enter the sub-menu "CODE" state.

 LCD:

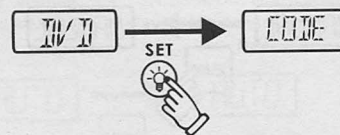


4. Press the "SELECT" key, to enter the settings state.

 LCD:

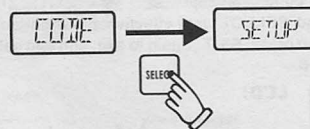


 5. Input four-digit code 3036, if correctly, with a beep it returns to sub-menu "CODE" press button "EXIT" it will exit and save the setting. Check other buttons (except Button SET, Button EQUIPMENT, Button KidsCH, M1, M2) for functionality and end setting, or repeat procedure 4~5 (if code input is wrong, beeps will be given out to call for new input).

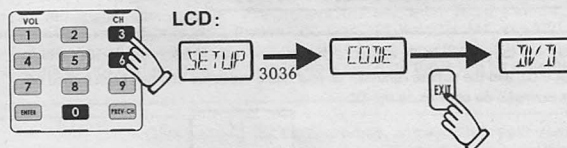


B. Method of manual search of code

 1. Manually turn on the home appliance you are going to take remote control of (e.g. TV or VCR, etc.), aim the remote controller at the home appliance that has been turned on. For example: to do settings on the TV.




2. Press key **TV** once to switch to "TV" interface.

 LCD:




3. Press the "SET" key for about 5 seconds, enter the sub-menu "CODE" state; then press the "▶" key to show "SEARCH", then press the "SELECT" key, the "MANUAL" will blink.

 LCD:

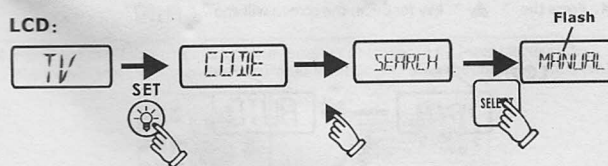


 4. Press the "SELECT" key for once, the "Code" will blink.

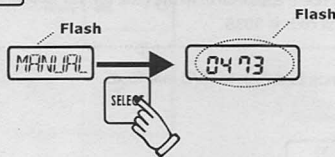

5. Aim the remote controller at the TV set, click the "▲" key, until the screen of the TV set shows the "VOLUME" mark. Press the "SELECT" key to return to the "MANUAL" state.

 
LCD:

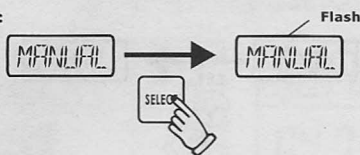

Remarks: except for that A/C (air-conditioner) shows Turned On, other home appliances all show the "Volume" mark. Therefore, when doing the settings, be sure to turn on the power of A/C (air-conditioner), and make it remain in the Stand-by state. Other home appliances shall remain in the Normal Play state.


6. Check if other buttons (except "▲", "▼", "EXIT", "EQUIPMENT", "KidsCH", "M1", "M2", and "SELECT") are effective, press button EXIT and return to menu "SEARCH", then press "EXIT" again to exit, and end setting, or repeat procedure 4~6.

 LCD:

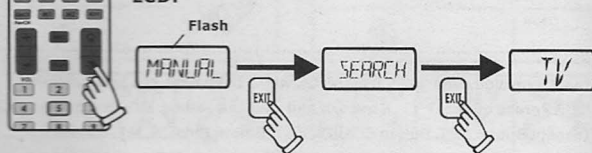


C. Fully automated search of code

 1. Manually turn on the home appliance that you are going to take remote control of (e.g. TV, VCR, etc.), aim the remote controller at your home appliance that has been turned on. For example: do settings on the TV.




2. Press key "TV" once to switch to "TV" interface.

 LCD:




3. Press the "SET" key for about 5 seconds, enter the sub-menu "CODE" state, then press the "▶" key to set the menu screen at "SEARCH", then press the "SELECT" key, the "MANUAL" will blink.

 LCD:

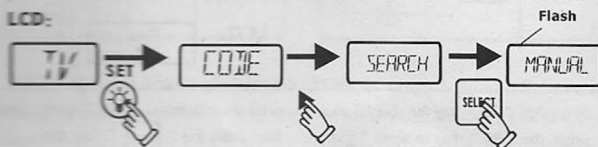

4. Press the "▲" key for once, the screen will show "AUTO".

 
LCD:

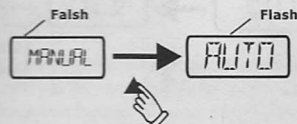

5. Press the "SELECT" key for once, the system enters the Fully Automated Search state.


Note: press the "▲" key to move to the previous code.
press the "▼" key to move to the following code.

 LCD:

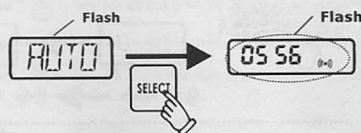


6. When a remotely controlled household appliance is shut down, with a prompt press of button "SELECT" the code of the appliance is locked (notes: TV, SAT, CBL, AMP, Xbox, and HOME THEATER will display "turn off" while A/C (air conditioner) displays "starting", and VCR, DVD, CD, and AUX display "play"; if VCR, DVD, CD, and AUX are "auto play", stop manually and they will stay waiting).

 LCD:

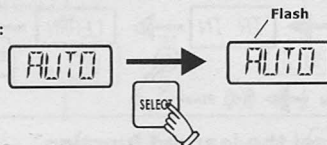

7. Check if other buttons (except "▲", "▼", "EXIT", "EQUIPMENT", "KidsCH", "M1", "M2", and "SELECT") are effective, press button EXIT and return to menu "SEARCH", then press "EXIT" again to exit, and end setting, or repeat procedure 5~7.

 LCD:

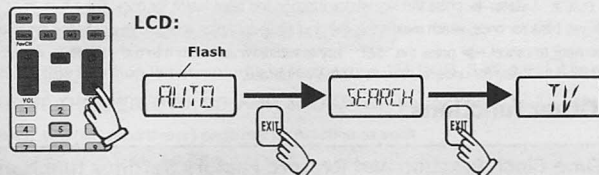


Learning function

On any page, this remote controller can learn from various infrared remote controllers of household appliances, such as TV, VCR, and A/C, etc; when you are setting a page, other buttons (except Button SET, Button EQUIPMENT, KidsCH, M1, and M2) of the remote controller all have learning function. (Notes: this remote controller can study 224 buttons at most, when study memory is not sufficient, there will be a sound for prompt).

Give button "SELECT" a press, and switch to your desired home appliance interface to study (for instance, set TV, press button "TV" to switch to "TV" interface).

 1. TV




2. Press the "SET" key for about 5 seconds, enter the sub-menu "CODE" state, then press the "▶" key to set the menu at the "LEARN" state.

LCD:




3. Press the "SELECT" key, the "LST" will blink; then press the "SELECT" key to enter the learning state, the "(())" will blink.

 LCD:

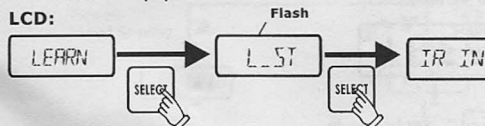


 4. Point the emission direction of the remote controller to be learnt from at the signal window of this remote controller horizontally (at a distance of 3 to 5 cm).

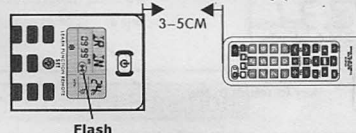


Flash

 - Press a certain function key on the target remote controller to send out its code, until the "(())" stops blinking, then loosen the key, it means the Code Sending Instruction of this function key has been learned.

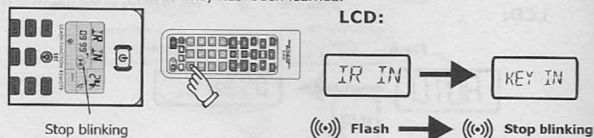

 - Press the corresponding key to be learnt from on this remote controller, "(())" will flicker again. Now other keys of the remote controller to be learnt from have been learnt to that key. Learn each key gradually in the same way till all keys have been learnt. Press key "SET" once to exit the learning mode. Press again key "EXIT" to return to the interface of "TV".

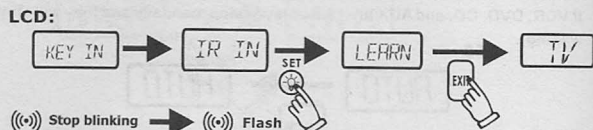

Remarks: Cancel the learned function

E.g. Cancel the learnt TV interface

 
Press the "SELECT" key to shift to the TV interface, → press the "SET" key for about 5 seconds to enter the Settings state → press the "▶" key to shift to the "LEARN" state → press the "BACK" key to enter → press the "▲" to shift to the "CLEAR" state. Press the "BACK" key to the "CLEAR" state → press the Key whose function has been learnt for once, the "K" in CLEAR will blink for once, which means this key is cancelled. Repeat doing so to cancel the information that you want to cancel → press the "SET" key to withdraw and return to the "LEARN" menu, press the "BACK" key for once, to return to the TV interface.

Other functions

1. Time Clock function and Restore Factory Settings function

The following operation can be conducted on the 11 pages of TV, VCR, SAT, CBL, Xbox, HOME THEATER, A/C, DVD, CD, AMP, and AUX.


- Press the "SET" key for about 5 seconds to enter the Setting mode;

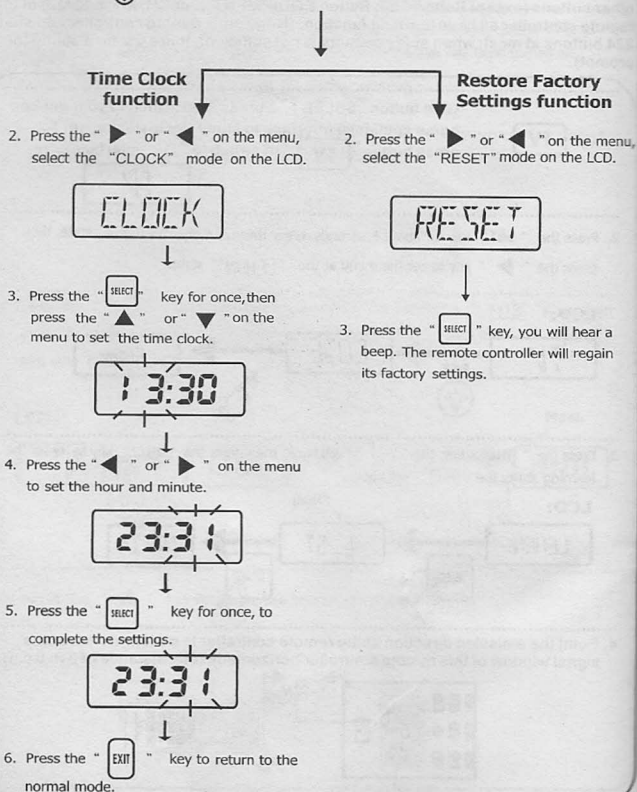

2. Key Sound On/Off Settings

- Press the "SET" key for about 5 seconds, to enter the Settings mode.

 - Press the "▶" or "◀" on the menu, or select the mode on the LCD.

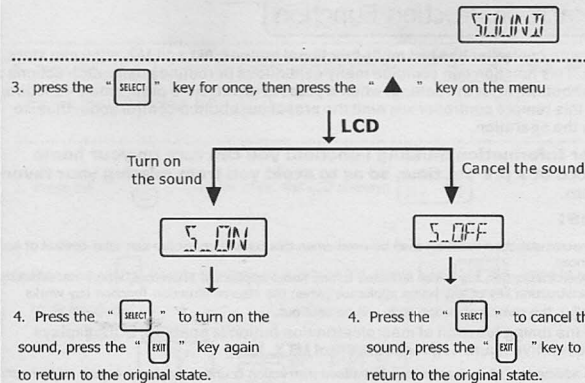


3. Sound Sharing Function

After this function is set, volume of ten device, TV, VCR, SAT, CBL, Xbox, HOME THEATER, DVD, CD, AMP, and AUX can be controlled by TV volume.


Note: A/C (air-conditioner) page has no function as such.

E.g.: to cite DVD as an example:

 
- Press DVD key once to switch to DVD interface.



 
- Press the "SET" key for about 5 seconds, to enter the Settings mode.

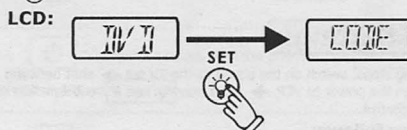

 - Press the "▶" or "◀" on the menu or select the mode on the LCD.

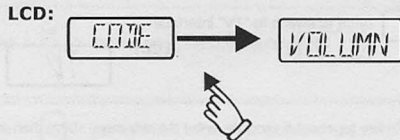

 - Press the "SELECT" key for once, then press the "▲" or "▼" key on the menu.

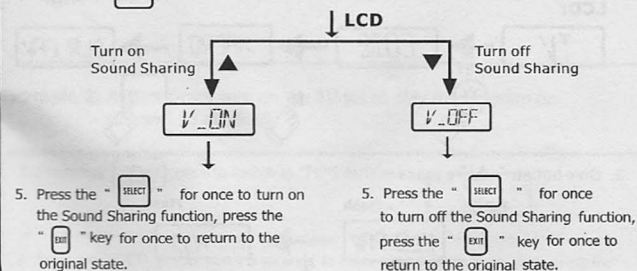

4. Backlight Control Function

Press the "SET" key to enter the backlight mode, then press the "SET" key to cancel the backlight mode.



5. Macro instruction Function

This remote controller has two multi-functional buttons, M1 and M2, each can store 21 buttons. This function can combine many continuous or routine pushbutton actions as one pushbutton; after the setting, when a press is given to the preset multi-functional button, this remote controller will emit the preset pushbutton control code, thus, to simplify the operation.

Regular Information Sending Function: you can turn on your home appliance at a pre-set time, so as to avoid you from missing your favorite program.

Notes:

- The macroinstruction function shall be used when this remote controller can take control of home appliances.
- The Macroinstruction key is not affiliated to any home appliance. Therefore, when you press the Macroinstruction key of any home appliance (when the Macroinstruction function key works normally), the same instruction code will be sent out.
- Once the timing function of macroinstruction button is enabled, LCD displays representative figure 1, 2 respectively of MTX, X.
- When adding in a Macroinstruction, the added instruction is under the current code of the current home appliance. Once added successfully, the instruction will have nothing to do with the code set on the home appliance.

Notes:


- The LCD displays **CLR M1**, meaning Cancel the settings at the M1 key. Press the "SELECT" key to confirm, press the "OFF" key to withdraw.
- The LCD displays **CLR M2**, meaning Cancel the settings at the M2 key. Press the "SELECT" key to confirm, press the "OFF" key to withdraw.
- The LCD displays **M1 ADD**, meaning Adding in an instruction into the M1 key;
- The LCD displays **M2 ADD**, meaning Adding in an instruction into the M2 key.
- Press equipment key to delete the previous instruction; and press "SET" to exit adding instruction mode.
- M1 XX** - XX means the number of instructions in the M1 Macroinstruction Key; up to 21 instructions can be stored.
- M1 TM** can display the time of regular code sending by this Macroinstruction key at the time display area; and the hour digit will blink, waiting for the user to adjust the time of regular code sending.
- M1 XS** - X means the time interval (X seconds) between this instruction and the next instruction, when being sent.

A. Macro Settings

Example 1. Operating steps: switch on the power to the TV set → shift between TV/VCR → switch on the power to VCR → start playing, use a multi-function key "M1" to take control.


Do the settings as follows:

 - Press key **TV** once to switch to "TV" interface.




- Press the "SET" key for about 5 seconds, enter the sub-menu state, then press the "▶" key or "◀" to set the menu at "MACRO", press the "SELECT" key.

 LCD:

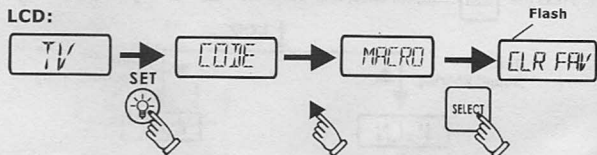

- Give button "▲" a press.

 LCD:

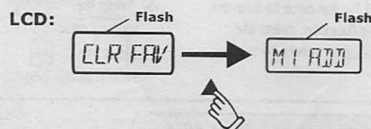

- Press the "SELECT" key again. The LCD displays **M1 00**.

(If the display is not M1-00, press equipment key to adjust).

- Press the "ON" key for a while, until the LCD displays **M1 25**, then loosen the key, the LCD displays **M1 01**.

- Press the "TV/AV" key for a while, until the LCD displays **M1 25**, then loosen the key, the LCD displays **M1 02**.

- Press the "SET" key for once, the LCD displays **M1 TM**.

- Press key "EXIT" twice to return to interface TV. Press key **VCR** once to select VCR interface;

LCD:



- Press the "SET" key for about 5 seconds, to enter the Settings mode.

- Press the "▶" or "◀" on the menu, or choose on the LCD; the LCD displays **MACRO**.

- Press the "SELECT" key, then press the "▲" key on the menu: **M1 ADD**.

- Press the "SELECT" key again, the LCD shows **M1 02**.

- Press the "ON" key for a while, until the LCD displays **M1 25**; then loosen the key, the LCD displays **M1 03**.

- Press the "▶" key (Play) for a while, until the LCD displays **M1 25**, then loosen the key, the LCD displays **M1 04**.

- Press the "SET" key for once, the LCD displays **M1 TM**.

- Press the "EXIT" key for twice, to return to the VCR page, complete the settings.


Namely, you can use the multi-function key "M1" to take control of the steps: Switch on the power to the TV set → shift between TV/VCR → switch on the power to VCR → start playing (PLAY)

Example 2: Automatically turn on the TV set to play the program on Channel 13 at 19:30


- Press key **TV** once to switch to "TV" interface.



 - Press the "SET" key for about 5 seconds, to enter the sub-menu state; then press the "▶" key or "◀" to set the menu at "MACRO" then press the "SELECT" key.

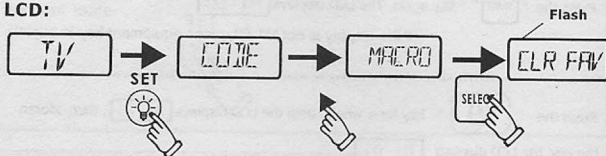LCD:

 
3. Click the "▲" key on the menu.

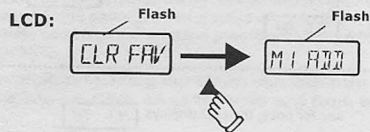

4. Press the "SELECT" key again, the LCD displays **M1 00**.

(If the display is not M1-00, press equipment key to adjust).

5. Press the "POWER" key for a while, until the LCD displays **M1 25**, then loosen the key, the LCD displays **M1 01**.

6. Press the "ENTER" key for a while, until the LCD displays **M1 25**; then loosen the key, the LCD displays **M1 02**.

7. Press the "1" key for a while, until the LCD displays **M1 25**, then loosen the key, the LCD displays **M1 03**.

8. Press the "3" key for a while, until the LCD displays **M1 25**, then loosen the key, the LCD displays **M1 04**.

9. Press the "SET" key for once, the LCD displays **M1 TM**.

10. Press the "▲" or "▼" on the menu to set the time clock;

19:00

11. Press the "◀" or "▶" on the menu to set the hour and minute.

19:30

12. Press the "SELECT" key for once, to complete the settings.

LCD: MACRO

13. Press the "EXIT" key to return to the TV page. **LCD:**

TV T

14. Aim the transmitting end of the remote controller at the receiving end of the TV set. When it is **19:30**, the remote controller will turn on the TV, and play the program on **Channel 13**.

 
6. Kids channel (KidsCH) and Favorite channel (FAV)

For example, press "12", "1", "9" to set "KidsCH":


1. Press button "TV" to switch to "TV" interface.

TV

2. Press button "SET" for about 5 seconds to enter submenu, then press "▶" or "◀" to transfer the menu to "MACRO", then press button "SELECT".

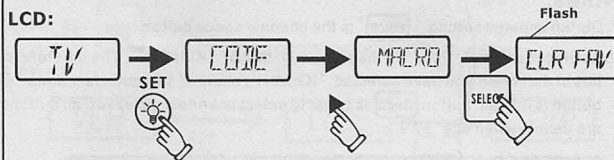LCD:

 
3. Press button "▲" in the menu functional button again and again.

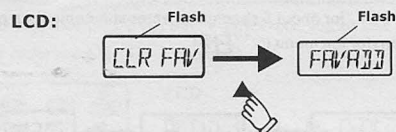

4. Press again the button "SELECT" to see LCD display **FAV 00**.

(If **FAV 00** is not displayed, button - EQUIPMENT - should be pressed for adjustment)

5. Press "ENTER" to see LCD display **FAV 05** and release to see **FAV 01**.

6. With a press given to "1", LCD displays **FAV 05**, with a release, it displays **FAV 02**.

7. Press "2" to display **FAV 05** on the LCD, release to display **FAV 03**.

8. Then press "KidsCH" to let out sound "tick".

 
9. Press "1" likewise to display **FAV 05** on the LCD, and release to display **FAV 04**.

10. Then press "KidsCH" to let out sound "Tick".

11. Press "9" likewise to display **FAV 05**, and release to display **FAV 05**.

12. Then press "KidsCH" to let out sound "Tick".

13. Press "SET"

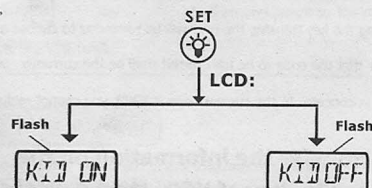

14. Then press "SELECT" return to interface "MACRO" to start "KidsCH" with "KIDS" displayed.

14. Press "SELECT", return to interface "MACRO" to start "FAV".

Notes:

- During channel setting, "KidsCH" is the channel space button.
- Setting method of "FAV" is the same with that of "KidsCH". The difference lies in that when you have selected "KidsCH", channel selection functional button is locked, button "KidsCH" is taken to select channels; however, all buttons are usable when use "FAV".

 
7. Celsius-Fahrenheit switching function

- Press button "SET" for about 5 seconds to enter submenu, then press "▶" or "◀" to transfer the menu to "TEMP".

LCD:



- Press "SELECT", then press "▼".

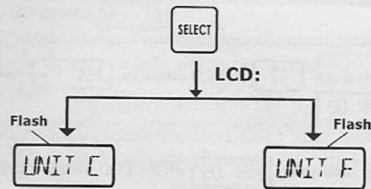

- Press "SELECT", return to interface "TEMP" where the current temperature displayed is Celsius degree.
- Press "SELECT", return to interface "TEMP" where the current temperature is Fahrenheit degree.

8. Set/Cancel Key Transfer

Transfer the function key of a home appliance to the function key of another appliance.

Notes:

- The key transfer code and learning code are both X999. therefore, after starting the key transfer function, you may have to set a code before using the key transfer function. The TV code is pre-set to be 0999; the VCR code is pre-set to be 1999; and the SAT code is pre-set to be 2999; and the DVD code is pre-set to be 3999; and the CD code is pre-set to be 4999; and the CBL code is pre-set to be 5999; and the AMP code is pre-set to be 6999; and the XBOX code is pre-set to be 7999; and the AUX code is pre-set to be 8999; and the A/C code is pre-set to be 9999; and the HTIB code is pre-set to be 0999;
- When doing the key transfer, be sure to use a code that is not X999.
- When doing the key transfer, the user will be reminded to choose a home appliance. But remember that the code to be transferred shall be the currently set code for the home appliance in concern. If the current code is X999, you cannot realize the key transfer.

E.g.: to transfer the information on the "6" key of SAT onto the "7" key of VCR, then cancel such a transfer.

 
- Press key "VCR" once to switch to VCR interface.

LCD:



- Press the "SET" key for about 5 seconds, to enter the sub-menu "CODE" state, then press the "SELECT" key.


LCD:

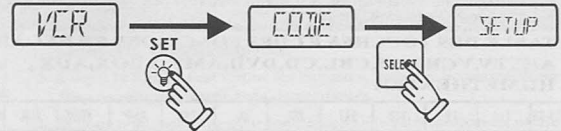

- Enter a four-digit code 1999. If you enter a correct code, you will hear a beep, and the system will return to the "CODE" sub-menu.



 LCD:




- Press the "▶" or "◀" on the menu, or select the mode on the LCD. "KEYMOV"

LCD:



 - Press the "SELECT" key, then press the "▲" key.

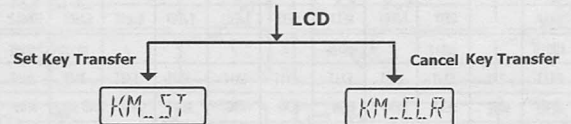

- Press the "SELECT" key for once, the LCD displays



- Press the "▲" key on the menu, the LCD displays



 
- Press the "SELECT" key, the LCD displays "FR KEY". Press the function key 6, the LCD displays "TO KEY", then press the function key 7. Repeat this step to transfer the target key.

- Press the "SET" key, the LCD displays "KEYMOV", then press the "EXIT" key to withdraw, and return to the VCR page.

- Press the "SELECT" key for once, the LCD displays



- Press the key whose information has been transferred, the LCD displays



Repeat this step to cancel the transferred key information. Example: Function key 7

- Press the "SET" key, the LCD displays "KEYMOV"

- Then press the "EXIT" key again, to withdraw and return to the normal state.

9. Reminder of low power

When the battery is going out of power, the screen of any interface of this remote controller will show a "B" mark, reminding you of the lower power in batteries.

SETUP CODES FOR TV

888.....0587,0607,0610,0633
Abex.....0041,0282
Admiral.....0069,0147,0170,0294,0401
Advent.....0064,0219
Adventura.....0015,0284,0363
Aiko.....0103,0293
Aiwa.....0042,0066,0094,0143
.....0563,0611,0612
Akai.....0020,0036,0079,0195,0281
Alaron.....0309
Allegro.....0327,0328
Alleron.....0175
Amark.....0147,0272
Ambassador.....0307
Amtron.....0224
Anam.....0289,0310
Anam National.....0028,0199
.....0221,0224,0238
ANHUA.....0555,0571,0586,0601
Antram.....0415
AOC.....0000,0001,0026
.....0040,0062,0090,0124
.....0272,0276,0281,0311,0369
AOLINPIKE.....0587,0607,0610,0633
AOLINPU.....0658
Apex.....0019,0044,0068,0193
Archer.....0147,0272
Aspect.....0129
Audiovox.....0224
Aumark.....0291
Axion.....0089,0194
BAIHEHUA.....0577,0578,0594,0597
BAIHUA.....0570,0579,0587
.....0607,0610,0633
BAILE.....0566,0570,0573,0579,0580
.....0581,0582,0583,0584,0585,0586
Bang & Olufsen.....0162
BaoHuaShi.....0587,0607,0610,0633
BAOSHENG.....0565,0570,0579
Baysonic.....0310
BEIJING.....0562,0565,0566,0570
.....0573,0575,0577,0578,0579,0580
.....0581,0582,0583,0584,0585,0587
.....0593,0594,0596,0597,0604,0605
.....0607,0610,0633,0645,0676,0680
.....0787,0819,0852
Belcor.....0000,0276
Bell & Howell.....0128,0145,0170
.....0173,0387
Benq.....0178,0180,0227
BENQ.....0848
Beuamark.....0274,0281,0309
Bradford.....0224,0310
Broksonic.....0000,0022,0038,0086
.....0096,0165,0167,0276
.....0290,0314,0321,0368
CAIHONG.....0565,0570,0579,0577
.....0578,0594,0597,0627,0656
Candle.....0000,0015,0098,0124
.....0281,0284,0290,0312
Capehart.....0040
Carnivale.....0281
Carver.....0288
CCE.....0353
Centurion.....0124
Celebrity.....0195,0331
Celeria.....0019
Centrios.....0138
Cetronic.....0199
CHANGCHENG.....0555,0565,0566
.....0570,0571,0573,0577,0578,0579
.....0580,0581,0582,0583,0584,0585
.....0587,0594,0596,0597,0607,0610
.....0633
CHANGFEI.....0565,0570,0579
.....0596,0677
CHANGFENG.....0565,0578,0587,0599
.....0600,0607,0610,0633
CHANGHAI.....0565,0570,0579,0677
Changhong.....0019,0193,0554,0562
.....0563,0564,0565,0568,0570
.....0580,0582,0587,0605,0606
.....0611,0612,0621,0625,0640
.....0641,0642,0645,0647,0654
.....0713,0716,0736,0737,0738,0780
.....0842,0843,0844,0845,0846,0851
CHENGDU.....0565,0579
CHUANGJIA.....0627,0655
CHUNFENG.....0570,0579,0587
.....0607,0610,0633,0678
CHUNLAN.....0661,0685,0696
CHUNSUN.....0565,0570,0579
Cineral.....0293,0320
Citizen.....0000,0036,0038,0098
.....0103,0124,0133,0140,0170
.....0199,0224,0281,0283,0284
.....0290,0291,0293,0312,0316
Clairtone.....0001,0311
Classic.....0019,0193,0199
CLP.....0006
CLP Classic.....0000,0004,0016
Color Voice.....0146

SETUP CODES FOR TV

Colortyme.....0000,0124,0146
Concerto.....0000,0124,0290
Concierge.....0182
CONROWA.....0554,0560,0561,0562
.....0564,0570,0579,0587,0599
.....0600,0602,0607,0609,0610
.....0627,0653,0685,0758,0812
Contec.....0001,0196,0199,0224
.....0302,0310,0311,0337
Contec.....0342,0402
Cornea.....0150
Cony.....0342,0402
Craig.....0199,0224,0310
Crosley.....0201,0288
Crown.....0199,0224,0283,0310
CTX.....0147
Curtis Mathes.....0000,0027,0036,0121
.....0124,0128,0133,0145,0158,0170
.....0173,0281,0283,0288,0290,0291
.....0294,0297,0305,0320,0322,0329
.....0330,0337,0387,0403
CXC.....0199,0224,0310
Daewoo.....0000,0023,0026,0060,0073
.....0084,0099,0103,0110,0124,0125
.....0127,0144,0146,0153,0155,0158
.....0159,0199,0216,0223,0276,0283
.....0293,0320,0325,0326,0360,0367
.....0371,0374,0376,0382,0383
Daytron.....0000,0124,0276,0283
DAYU.....0566,0585,0596
Dell.....0100,0142,0208
Denon.....0297
DETRON.....0766
Diamond Vision.....0123,0164,0204
Digistar.....0039,0059,0088,0108,0250
DIGITEC.....0701,0704,0768
Dimensia.....0145,0173
Disney.....0112
DONGDA.....0570,0579
DONGHAI.....0570,0579
DONGLIN.....0631
Dukane.....0129,0202
Dumont.....0000,0182,0274,0276
DUONGJIE.....0627,0651,0655
Durabrand.....0020,0038,0087,0093
.....0122,0140,0234
Dwin.....0327,0328
Dynasty.....0199
Dynatech.....0353,0381
Electroband.....0001,0195,0311,0331
Electrohome.....0000,0020,0124,0197
.....0221,0318,0337,0393
Elektra.....0170
Elite Video.....0091
Emerson.....0000,0002,0003,0004,0007
.....0020,0028,0029,0030,0038,0046
.....0047,0070,0071,0074,0075,0086
.....0094,0096,0124,0127,0128,0139
.....0140,0143,0148,0149,0150,0158
.....0167,0172,0174,0175,0198,0199
.....0216,0222,0224,0241,0276,0281
.....0283,0307,0308,0309,0310,0311
.....0314,0316,0317,0321,0325,0326
.....0332,0337,0345,0346,0354,0357
.....0365,0383,0386,0388,0389,0390
.....0399,0402,0404,0405,0406,0407
.....0421,0422
FEILANG.....0570,0579
FEILU.....0565,0570,0579
FEIYAN.....0587,0607,0610,0633
FEIYUE.....0565,0570,0577,0578
.....0579,0594,0597
Fisher.....0118,0128,0156,0161
.....0196,0300,0303,0340
Fujitsu.....0091,0175,0309
.....0602
FULL.....0601
Funai.....0071,0094,0140,0175,0199
.....0224,0306,0309,0310
Futuretec.....0199,0224
Futuretech.....0310
GANGTAI.....0651
GANXIN.....0565,0571,0577,0578
.....0581,0594,0595,0597
Gateway.....0052
GE.....0000,0004,0005,0014,0027,0037
.....0080,0082,0124,0145,0173,0197
.....0200,0217,0221,0278,0280,0294
.....0317,0320,0329,0330,0336,0387
.....0393,0412
Gibraltar.....0000,0182,0274,0276
Go Video.....0291
Goldstar.....0000,0026,0062
.....0077,0094,0120,0124,0153
.....0196,0271,0276,0281,0283
.....0290,0334,0337,0363,0369
.....0402,0563,0573,0577,0578
.....0594,0597,0652,0694
Gradiente.....0287,0290
Grundy.....0175,0224,0309,0310
Guestvision.....0190
Haier.....0068,0087,0093,0178,0657

SETUP CODES FOR TV

.....0659,0666,0672,0673,0729,0732
.....0739,0740,0741,0742,0755,0759
.....0760,0772,0826
HAIHONG.....0570,0579,0580,0581,0582
.....0583,0584,0631,0657,0822
HAILE.....0586,0601
HAIYAN.....0565,0577,0578,0587,0594
.....0597,0607,0610,0633
Hallmark.....0000,0124
Harley Davidson.....0309
Harman.....0288
Harvard.....0224,0310
Hisense.....0068,0212,0226,0554,0560
.....0561,0562,0564,0568,0569,0579
.....0599,0600,0611,0656,0657,0659
.....0661,0669,0670,0682,0683,0684
.....0685,0692,0693,0725,0726,0727
.....0728,0739,0740,0741,0742,0743
.....0744,0745,0778,0779,0787,0819
.....0820,0823,0824,0825,0827,0828
.....0853
Hitachi.....0000,0085,0094,0106,0124
.....0129,0136,0139,0143,0151,0170
.....0176,0179,0184,0196,0202,0209
.....0282,0290,0297,0332,0333,0337
.....0342,0347,0358,0362,0375,0400
.....0402,0408,0554,0560,0561,0562
.....0564,0569,0581,0602,0733
.....0782
HITCHI FUJIAN.....0561,0565,0569,0577
.....0578,0582,0587,0588,0594,0597
.....0607,0610,0614,0615,0619,0633
.....0656
HONGMEI.....0557,0563,0565,0570
.....0572,0577,0578,0579,0587,0594
.....0597,0610,0611,0612,0633
HONGYAN.....0565,0587,0607,0610,0633
.....0561,0570,0579
HUAFU.....0561,0570,0579
HUANGHAI.....0570,0579
HUANGHE.....0565,0570,0577,0578
.....0579,0594,0597,0605,0657,0679
.....0709
HUANGLONG.....0570,0579
HUANGSHAN.....0565,0570,0577,0578
.....0579,0586,0587,0594,0597,0607
.....0610,0633
HUANYU.....0563,0565,0569,0577,0578
.....0587,0594,0597,0607,0610,0611
.....0612,0633
HUAQIANG.....0587,0607,0610
.....0633,0790
HUARI.....0561,0587,0607,0610,0633
HUIJIABAN.....0655
HUODAKEJI.....0555,0571,0586,0601
ILO.....0116,0244,0253,0257
IMA.....0224
IMPERIAL CROWN.....0566,0573,0579
.....0580,0581,0582,0583,0584,0585
.....0587,0596,0607,0610,0633
Infinity.....0119,0201,0288,0294
Initial.....0253
Insignia.....0038,0059,0071,0088,0093
.....0188,0126,0140,0229,0232,0414
.....0767
INTEL.....0182,0274
Inteq.....0015,0284
Janel.....0201,0288,0394
JBL.....0000,0005,0026,0027,0036
.....0080,0082,0098,0124,0133,0145
.....0148,0173,0196,0197,0200,0342
.....0379,0387,0393,0410
JCB.....0195,0331
Jensen.....0000,0124,0232
JIAHUA.....0555,0571,0586,0587,0601
.....0655,0703,0761
JIALICAI.....0570,0579,0582,0587
.....0607,0610,0633,0678,0732
JIAN SHENG.....0658
JINGFENG.....0555,0565,0575,0576
JINGHAI.....0563,0611,0612,0653
JINGLIPIU.....0592
JINGTA.....0563,0570,0577,0578,0579
.....0587,0594,0597,0607,0610,0611
.....0612
JINGXINGBAN.....0658
JINQUE.....0565,0570,0579,0586
.....0587,0607,0610,0633
JINXING.....0561,0562,0565,0567,0578
.....0579,0586,0587,0593,0605,0611
.....0619,0625,0627,0633,0645,0651
.....0656,0661,0692,0779
JUHAU.....0565,0577,0578,0587
.....0594,0597,0607,0610
JVC.....0032,0050,0078,0091,0095,0130
.....0151,0184,0196,0243,0287,0337
.....0342,0359,0372,0380,0402,0408
.....0643,0715
KAIGE.....0565,0570,0577,0578,0579
.....0587,0594,0597,0607,0610
KANGHONG.....0563,0611,0612
KANGHUA.....0657

SETUP CODES FOR TV

KANGLI.....0559,0565,0566,0570
.....0573,0577,0578,0579,0580
.....0581,0582,0583,0584
.....0585,0587,0594,0596
.....0597,0674,0758,0825
KANGWEI.....0631,0655,0658
KANGYI.....0570,0579,0587,0607
.....0610,0633,0675
Kardon.....0288
Kawasho.....0000,0124,0195
Kaypani.....0040
KEC.....0199,0310
Kenwood.....0000,0124,0276
KLH.....0019
Kloss.....0279,0284
Kloss Novabeam.....0015,0104
KONGQUE.....0565,0570,0577,0578
.....0579,0587,0594,0595,0597,0678
Konka.....0049,0054,0076,0126,0171
.....0218,0224,0229,0242,0565,0571
.....0583,0586,0588,0608,0621,0623
.....0625,0629,0630,0631,0632,0633
.....0634,0635,0661,0667,0671,0717
.....0718,0719,0731,0764,0771,0789
.....0804,0805,0806,0807,0808,0809
.....0810,0811
KTV.....0001,0152,0172,0199,0224
.....0283,0310,0311,0316,0337,0353
KUAILI.....0570,0579,0587
.....0607,0610,0633
KUNLUN.....0555,0565,0566,0575
.....0576,0579,0587,0593,0594,0596
Kurzai.....0170
Lasonic.....0123,0164
Lehua.....0565,0567,0570,0577
.....0578,0579,0594,0597
.....0650,0681,0802,0821,0822
LG.....0000,0026,0062,0077,0094,0120
.....0124,0150,0153,0196,0290,0578
.....0594,0597,0652,0694,0813,0814
.....0815
Lidgenet.....0145,0170,0173,0214
LIHUA.....0565
Liquidvideo.....0089,0113,0194
Lodgenet.....0387
Loewe.....0191,0201
Logik.....0145,0170,0173,0387
Luce.....0031
Luxman.....0000,0124,0290
Lxi.....0000,0027,0082,0094,0124
.....0128,0133,0145,0173
.....0201,0274,0288,0300,0310,0330
.....0340,0341,0363,0387,0394
Magnasonic.....0000,0124,0201
Magnavox.....0000,0033,0069,0071
.....0098,0104,0119,0124,0184,0201
.....0237,0277,0279,0281,0288,0295
.....0306,0309,0312,0313,0319,0335
.....0337,0394
Majestic.....0145,0170,0173,0387,0273
MANTIANXING.....0668
Marantz.....0000,0124,0188,0201
.....0281,0288,0394
Matsui.....0394
Matsushita.....0315
Medion.....0112,0116,0240
Megatron.....0000,0124,0129,0272,0297
MEI.....0001,0311
MEILE.....0563,0565,0577,0578,0587
.....0594,0597,0607,0610,0611,0612
.....0633
Memorex.....0000,0038,0118,0124,0128
.....0145,0167,0170,0173,0175,0273
.....0290,0291,0298,0300,0315,0387
MENGMEI.....0577,0578,0594,0597
MGA.....0000,0026,0124,0161,0175
.....0184,0196,0197,0276,0281,0299
.....0343,0393
Midland.....0005,0027,0082,0173,0182
Minut.....0200
Mitsubishi.....0000,0020,0026,0124
.....0161,0175,0184,0185,0197,0276
.....0294,0298,0308,0361,0565,0605
.....0419,0420
Mitsui.....0393
Mitsubishi.....0051
Monivision.....0145,0170,0173
Montgomery Ward.....0387
Moteva.....0128
Motoral.....0147,0221
Motorola.....0289,0294,0401
MTC.....0000,0001,0026,0036,0124
.....0133,0276,0281,0290,0291
.....0311,0381
MUDAN.....0555,0556,0565,0570,0574
.....0575,0576,0579,0586,0587,0593
.....0594,0597,0607,0610,0613,0617
.....0619,0633,0655,0661,0699,0700
.....0703,0772,0777
Multitech.....0224,0310,0353,0381
Multivision.....0008,0356

SETUP CODES FOR TV

Myron&Davis.....0215
 NAD.....0000,0041,0124,0133,0301
 0305,0308,0341
 NANBAO.....0563,0570,0579,0587
 0607,0610,0611,0612,0633
 NANSHENG.....0565,0587,0607
 0610,0633
 National.....0289
 NEC.....0000,0026,0035,0124,0146
 0184,0188,0221,0276,0281
 0290,0323,0360,0558,0560
 0565,0570,0578,0579,0587
 0607,0610,0633,0643,0694
 NET TV.....0012,0052
 Nextech.....0088,0256
 Nikel.....0199
 Nikko.....0000,0103,0124,0274,0281
 0285,0293,0300,0301,0308,0330
 NIKON.....0563,0611,0612
 Norcent.....0053,0068,0223
 Noshi.....0275
 NTC.....0103,0293
 Olevia.....0248
 Oncommand.....0190
 Onking.....0199
 Onwa.....0199,0224,0310
 Optimus.....0021,0041,0160,0192
 0300,0305,0315
 Optoma.....0249
 Optonica.....0035,0147,0294,0301,0304
 Orion.....0029,0038,0182
 0309,0314,0321
 OTHER BRAND.....0590,0598,0611
 0627,0631,0651,0655,0656
 0657,0658,0660,0668,0732,0847
 OULIN.....0655
 Panasonic.....0005,0021,0097,0111,0152
 0160,0169,0187,0192,0201,0221
 0271,0285,0286,0287,0288,0289
 0291,0294,0297,0298,0300,0301
 0304,0308,0315,0330,0344,0394
 PANASONIC.....0555,0556,0568,0569
 0574,0575,0576,0613,0620
 PANDA.....0555,0563,0565,0570,0575
 0576,0577,0578,0579,0580,0582
 0587,0594,0597,0605,0607,0610
 0611,0612,0615,0616,0627,0633
 0643,0645,0655,0678,0679,0735
 0757,0758,0762,0817,0818,0850
 PDLYTRON.....0705,0706,0768
 Penney.....0272,0275,0276,0278,0280
 0281,0282,0283,0285,0286
 0290,0291,0301,0308,0330,0337
 Philco.....0000,0026,0033,0098,0104
 0124,0184,0201,0221,0237
 0276,0277,0279,0281,0288
 0297,0312,0313,0321,0335
 0337,0364,0394,0402
 Philips.....0000,0016,0018,0033,0043
 0056,0067,0071,0080,0090
 0098,0104,0117,0119,0140
 0141,0163,0184,0201,0221
 0237,0567,0577,0578,0593
 0594,0597,0695,0795,0796
 Philips-Magnavox.....0018,0069,0092
 0119,0201,0237
 Pilot.....0000,0276,0281,0283
 Pioneer.....0000,0041,0124,0139,0154
 0188,0202,0305,0332,0386,0143
 Piva.....0246
 Polaroid.....0000,0026,0103,0110
 0124,0158,0212,0232
 0236,0276,0283,0293,0337
 Precision.....0063
 Price Club.....0036
 Prima.....0039,0059,0088,0250
 Princeton Graphics.....0132,0147
 Prism.....0005,0286
 Proscan.....0027,0082,0145,0173
 0210,0235,0281,0285,0387
 Proton.....0000,0040,0065,0124
 0213,0228,0272,0308
 0322,0337,0370,0397,0402
 Proview.....0245,0247
 Pulsar.....0000,0182,0274,0276
 QINGDAO.....0555,0565,0575,0576
 0587,0607,0610,0633
 Quasar.....0005,0021,0111,0152,0160
 0187,0192,0201,0221
 0286,0289,0304,0315
 Radio Shack.....0000,0035,0094,0102
 0124,0128,0145,0160,0173
 0174,0196,0199,0217,0224
 0276,0282,0283,0285,0290
 0300,0304,0308,0310,0337
 0340,0363,0387,0390,0402
 RCA.....0000,0005,0009,0026,0027
 0037,0057,0082,0090,0102
 0115,0124,0135,0139,0144
 0145,0155,0173,0189,0197
 0205,0210,0217,0221,0230
 0235,0275,0276,0285,0286

SETUP CODES FOR TV

.....0292,0294,0329,0330,0332,0348
 0377,0384,0386,0387,0398,0409
 Realistic.....0000,0035,0094,0102,0124
 0128,0145,0160,0173,0174,0196
 0199,0224,0281,0282,0283,0290
 0300,0304,0308,0310,0340,0345
 0363,0387,0390,0402
 Rhapsody.....0001,0311
 RIHONG.....0627
 RISHENG.....0651
 RIZHI.....0627,0651
 Runco.....0181,0182,0188,0274
 0281,0323,0324,0350
 Ruyi.....0565,0569,0577
 0578,0594,0597
 SAIGE.....0565,0570,0579
 Sampo.....0000,0012,0040,0052
 0124,0196,0281,0282,0283
 Samsung.....0000,0010,0026,0027
 0034,0036,0055,0058,0072,0079
 0121,0124,0133,0153,0196,0211
 0220,0281,0282,0283,0290,0291
 0308,0337,0349,0366,0396,0402
 0403,0410,0562,0565,0570,0575
 0578,0579,0587,0591,0593,0594
 0597,0604,0605,0645,0667,0677
 Samsux.....0124,0283
 Samtron.....0036
 SANJIAN.....0587,0607,0610,0633
 SANKEN.....0769
 SANLING.....0590
 Sansel.....0320
 Sansul.....0038,0167,0321,0368
 Santeca.....0017
 Sanyo.....0000,0081,0107,0118,0128
 0156,0161,0196,0298,0300
 0303,0340,0373,0378,0554
 0561,0562,0568,0569,0587
 0589,0607,0610,0633,0659
 0686,0687,0688,0756,0777
 SANYUAN.....0557,0565,0570,0572
 0577,0578,0579,0594,0597
 Scotch.....0000,0124,0308
 Scott.....0000,0002,0029,0124,0175
 0199,0224,0276,0308,0309
 0310,0314,0337,0354,0402
 Sears.....0000,0022,0027,0036,0071
 0082,0124,0128,0131,0133,0140
 0145,0156,0161,0173,0175,0196
 0201,0206,0285,0288,0290,0298
 0300,0301,0303,0306,0308,0309
 0340,0341,0342,0387
 Selectron.....0252,0254,0255
 Semivox.....0310
 Semp.....0301
 SEYE.....0651
 SHANGCHA.....0565,0587
 0607,0610,0633
 SHANGGUANGDIAN.....0712
 0720,0721
 SHANGHAI.....0563,0565,0570
 0571,0576,0577,0578,0579
 0587,0594,0597,0607,0610
 0611,0612,0633,0677
 SHANSHUI.....0562
 SHAOFENG.....0554,0560,0561
 0565,0569,0577
 Sharp.....0000,0035,0048,0069
 0070,0124,0131,0147,0207
 0225,0231,0283,0294,0302
 0304,0319,0337,0351,0391
 0395,0401,0402,0405,0411
 0557,0570,0572,0579
 0689,0690,0691
 SHENCAI.....0561,0570,0579,0587
 0607,0610,0611,0655
 SHENGLI.....0558
 SHENYANG.....0565,0570,0579
 0587,0599,0600
 SHERWOOD.....0570,0579
 Shogun.....0000,0276
 SHUYUAN.....0685,0758
 Signature.....0145,0170,0173
 0222,0273,0387
 Silvania.....0277,0279,0281,0295,0312
 Simpson.....0098,0312,0313
 SKYWORTH-RGB.....0565,0579,0587
 0599,0600,0614,0624,0625,0626
 0627,0628,0633,0637,0655,0661
 0662,0663,0697,0714,0722,0723
 0724,0730,0734,0735,0748,0749
 0750,0751,0752,0753,0754,0786
 0788,0829,0830,0831,0832,0834
 0835,0836,0837,0838
 Some models.....0338
 SONGBAI.....0570,0579
 SONGDIAN.....0655
 Sonic.....0001
 Sony.....0109,0168,0177,0195,0296
 0331,0364,0559,0595,0603
 0648,0660,0702,0791,0792,0793
 Soundesign.....0000,0098,0124,0175

SETUP CODES FOR TV

.....0199,0224,0308,0309,0310,0312
 Spectravis.....0239
 Spectricon.....0272
 Squareview.....0140,0306
 SSS.....0000,0199,0224,0310
 Star Sight.....0006
 Starlite.....0224,0310
 SUMO.....0768
 Superme.....0331
 Superscan.....0071,0131,0206
 Supersonic.....0025
 Supra.....0000,0203
 Supremacy.....0015
 Supre-Macy.....0284
 Supreme.....0195
 SVA.....0068
 Sylvania.....0000,0033,0038,0071,0094
 0098,0104,0124,0140,0184
 0186,0201,0237,0288,0313
 0318,0335,0339,0363,0392,0394
 Symphonic.....0002,0071,0094
 0140,0224,0306,0363
 Syntax.....0248
 TAISHAN.....0565,0570,0579,0581,0582
 0583,0584,0585,0592,0596
 Tandy.....0147,0294,0401
 Tatung.....0116,0178,0221
 0272,0289,0341,0381
 TCBO.....0570
 TCL.....0605,0607,0622,0625,0627,0636
 0637,0638,0639,0664,0665,0698
 0710,0753,0763,0770,0797,0798
 0799,0800,0801,0802,0803
 Tear.....0000,0665
 Technics.....0005,0274,0285
 0286,0315,0330
 Technika.....0273,0276,0283
 0288,0290,0291,0293
 0298,0309,0310,0312,0342
 Technol Ace.....0309
 Techwood.....0000,0005,0124,0272,0290
 Teknika.....0000,0015,0026,0036
 0098,0103,0124,0133,0145
 0160,0170,0173,0175,0196
 0199,0224,0337,0387,0402
 Telecaption.....0083
 Telefunken.....0290
 Telerent.....0145,0170,0173,0387
 Tera.....0370
 Tevion.....0116
 TIANE.....0557,0565,0572
 TIANGENGBAN.....0655
 TIANKEBAN.....0655
 TMK.....0000,0124,0290,0307,0308
 TONGGUANG.....0587,0607,0610,0633
 TOS.....0579,0587,0607,0610
 0631,0633,0655,0657
 Toshiba.....0022,0024,0035,0036
 0083,0114,0121,0128,0133,0137
 0157,0160,0166,0184,0188,0196
 0291,0300,0301,0340,0341,0342
 TOSHIBA.....0554,0561,0562,0568
 0569,0570,0581,0582,0584
 0587,0607,0610,0633,0643
 0644,0645,0713,0839,0840,0841
 Tosonic.....0311
 Totevision.....0283,0337
 Trical.....0302
 Trutech.....0251
 Universal.....0080,0200,0278,0280
 Vector research.....0281
 Victor.....0151,0287
 Vidikron.....0288
 Vidtech.....0000,0026,0124,0276,0308
 Viewsonic.....0052,0202
 Viking.....0015,0284
 Vizio.....0178,0416,0417,0418
 Wards.....0000,0002,0026,0033,0035
 0080,0098,0104,0124,0134,0145
 0170,0173,0175,0200,0201,0277
 0278,0280,0281,0288,0290,0295
 0296,0301,0304,0308,0309,0313
 0335,0336,0354,0385,0387,0394
 WARUMAIA.....0566,0585,0596
 WEIPAI.....0570,0579
 Westinghouse.....0011,0233,0325,0326
 White Westinghouse.....0061,0094
 0110,0144,0153,0155,0158
 Words.....0273,0276
 XIAHUA.....0565,0570,0578,0579
 0581,0587,0607,0608,0609
 0610,0614,0627,0633,0634
 0649,0652,0763,0765,0771
 0772,0783,0784,0785,0816,0849
 XIANGYANG.....0587,0607,0610,0633
 XIANGYU.....0570,0579,0586
 XIHU.....0565,0577,0578,0587,0592
 0594,0597,0607,0633,0652
 0685,0758,0773,0774,0775,0776
 XINGFU.....0570,0579
 XINGHAI.....0570,0579,0587
 0607,0610,0633

SETUP CODES FOR TV

XINGMENBAN.....0658
 XINRISONG.....0563,0611,0612,0655
 XINSIDA.....0677
 XR-1000.....0363
 XUELIAN.....0563,0577,0578,0594
 0597,0611,0612
 YAJIA.....0587,0607,0610,0633
 Yamaha.....0000,0026,0124
 0160,0276,0281
 YINGGE.....0570,0577,0578
 0579,0594,0597
 YONGBAO.....0563,0611,0612
 YONGGU.....0570,0577,0578
 0579,0594,0597
 YOULANASI.....0565,0577,0578
 0594,0597
 YOUSIDA.....0563,0570,0579
 0611,0612
 YUHAN.....0570,0579
 Zenith.....0000,0006,0013,0038,0045
 0069,0070,0094,0095,0101
 0103,0105,0110,0119,0120
 0121,0124,0127,0129,0150
 0167,0170,0179,0181,0182
 0183,0216,0222,0234,0273
 0274,0293,0298,0355,0363,0387
 ZHUHAI.....0570,0579,0596
 Zonda.....0272
 Other.....0598,0611,0633,0781

SETUP CODES FOR HDTV SetTop Boxes

Pioneer Sh-D505.....0258
 Zenith Hdsat420.....0259
 Zenith Hdsat520.....0259
 Zenith DTV1080.....0259
 Proscan Pshd105.....0260
 Rca Pshd105.....0260
 Rca Dtc-100.....0260
 Rca Dtc-210.....0260
 Hughes Htl-hd.....0261
 LG LSS-3200A.....0261
 LG HTL-HD.....0261
 Hughes Hird-e8.....0261
 Toshiba DST3000.....0261
 Toshiba DST3100.....0261
 Toshiba DW65X91.....0261
 Motorola hdt100.....0262
 Rca Hd65w20.....0263
 Samsung sir-ts160.....0264
 Samsung sir-ts360.....0264
 Go Video Hdt100.....0265
 Sylvania6900dtd.....0266
 Hughes Htl-hd.....0267
 LG LSS-3202A.....0267
 LG HTL-HD.....0267
 Hughes Hird-e10.....0267
 Toshiba DST3001.....0267
 Toshiba DST3101.....0267
 Toshiba DW65X92.....0267
 Hitachi 61hdx98b.....0268
 Hughes Htl-hd.....0268
 LG LSS-3201A.....0268
 LG HTL-HD.....0268
 Hughes Hird-e9.....0268
 Hughes Hird-e11.....0268
 Mitsubishi Shrd400.....0268
 Mitsubishi Shrd500.....0268
 Philips Dshd800r.....0268
 Samsung sir-t165.....0269
 Samsung sir-t351.....0269
 Sony Sathd100.....0270
 Sony Sathd200.....0270
 Sony Sathd300.....0270

SETUP CODES FOR VCR

Acele.....1009
 Admiral.....1029, 1155
 Adventra.....1101, 1195
 Aiko.....1112, 1180
 Aiwa.....1017, 1043, 1076, 1101, 1145, 1182
1195, 1203, 1204, 1223, 1224, 1225
 Akai.....1002, 1043, 1050, 1058, 1072
1088, 1100, 1125, 1149, 1157, 1158
1166, 1205, 1226, 1227, 1228
 Alba.....1229
 Allegro.....1045, 1080, 1122
 American High.....1114, 1143
 Amstrad.....1206, 1229
 Apex.....1086
 Asha.....1009, 1178
 AT&T.....1131
 Audio Dynamics.....1000, 1039, 1053
 Audiovox.....1017, 1145
 Baird.....1230, 1231
 Beaumark.....1009, 1178
 Bell&Howell.....1060, 1165
 Blaupunkt.....1232, 1233
 Broksonic.....1012, 1031, 1044, 1046
1057, 1078, 1090, 1095, 1137
1169, 1171, 1174, 1181, 1185, 1207
 Bush.....1226
 Calix.....1017, 1145
 Candle.....1000, 1001, 1009
1017, 1089, 1111
 Cannon.....1015, 1081, 1114, 1143
 Capehart.....1080, 1139
 Carver.....1048, 1164
 CCE.....1037, 1112, 1163, 1180
 CGM.....1225, 1228, 1234, 1236
 Cinerall.....1180
 Cinevision.....1017
 Citizen.....1000, 1001, 1009, 1017
1089, 1111, 1112, 1145, 1180
 Clorox.....1229
 Colortyme.....1000
 Coll.....1037, 1163
 Craig.....1009, 1017, 1037, 1059
1145, 1154, 1163, 1178, 1179
 Curtis Mathes.....1000, 1007, 1009, 1015
1043, 1048, 1066, 1074
1114, 1143, 1149, 1170
 Cybernex.....1009
 Daewoo.....1001, 1007, 1077, 1089, 1090
1101, 1109, 1111, 1112, 1139
1152, 1180, 1187, 1237, 1238
 Daytron.....1139
 DBX.....1000, 1039, 1053
 Denon.....1150
 Diamond Vision.....1042
 Dimensia.....1015
 Durabraned.....1017
 Dynatech.....1043, 1101, 1195
 Electrohome.....1002, 1017, 1145
 Electrophonic.....1017, 1145
 Emerex.....1140
 Emerson.....1002, 1009, 1017, 1018, 1022
1031, 1032, 1041, 1043, 1044, 1046
1060, 1071, 1074, 1075, 1076, 1078
1089, 1090, 1092, 1093, 1095, 1096
1100, 1101, 1103, 1105, 1112, 1113
1114, 1121, 1123, 1137, 1144, 1145
1151, 1157, 1158, 1162, 1169, 1171
1173, 1174, 1176, 1180, 1181, 1185
1187, 1195, 1207
 Ferguson.....1239, 1240, 1241
 Fisher.....1000, 1003, 1004, 1047
1048, 1059, 1060, 1124, 1154
1156, 1160, 1165, 1229
 Fujii.....1072, 1114, 1141, 1143
 Funai.....1041, 1043, 1071
1101, 1195, 1206, 1242
 Garrard.....1101, 1195, 1206
 GE.....1009, 1015, 1023, 1061, 1104, 1114
1118, 1143, 1155, 1172, 1178
1183, 1186, 1208, 1209
 Go Video.....1000, 1017, 1036, 1043
1065, 1080, 1145, 1146
 GoldStar.....1234, 1243
 Goodman.....1237, 1244
 GO-Video.....1009, 1026, 1028, 1040
1054, 1067, 1109
 Gradiente.....1101, 1138, 1195
 Grundig.....1232, 1235, 1245
 Harley Davidson.....1101, 1195
 Harman Kardon.....1000, 1002
1146, 1164
 Harwood.....1037, 1162, 1163
 Headquarter.....1153, 1060
 HI-Q.....1059, 1154
 Hitachi.....1043, 1051, 1082, 1117
1125, 1149, 1150, 1166
1195, 1246, 1247, 1248
 Ieteq.....1017
 Infinity.....1062
 Insignia.....1017
 Instant replay.....1043, 1114

SETUP CODES FOR VCR

ITT.....1230
 JC Penney.....1000, 1009, 1015, 1017
1039, 1053, 1060, 1082
1114, 1117, 1125, 1128
 JCL.....1114
 Jensen.....1082, 1125, 1149
 JVC.....1000, 1039, 1045, 1053, 1060
1070, 1099, 1125, 1138, 1149
1161, 1233, 1249, 1250, 1251
 KEC.....1145, 1180
 Kendo.....1243
 Kenwood.....1000, 1039, 1053, 1060
1125, 1146, 1149, 1153, 1161
1037, 1163
 KLH.....1017, 1114, 1143, 1145
 LG.....1043, 1056, 1065, 1080, 1234, 1243
 Liteon.....1135
 Lloyd.....1043, 1101
 Lloyd's.....1173, 1195
 Loewe.....1243, 1244, 1252
 Logik.....1037, 1163
 Luxor.....1253
 LXI.....1017, 1043, 1145
 Magin.....1178
 Magnasonic.....1180, 1188
 Magnavox.....1013, 1015, 1016, 1029
1033, 1041, 1043, 1048
1062, 1080, 1087, 1114
1143, 1147, 1164, 1168, 1195
 Magnin.....1009
 Marantz.....1000, 1039, 1048, 1053, 1060
1078, 1081, 1114, 1143, 1146, 1164
 Marta.....1017, 1145
 Mastui.....1234, 1254
 Matsushita.....1114, 1143, 1170, 1184
 Medion.....1042
 MEI.....1114, 1143
 Memorex.....1004, 1009, 1017, 1029
1043, 1048, 1050, 1059, 1060
1080, 1095, 1101, 1114, 1143
1145, 1147, 1153, 1154, 1155, 1165
1178, 1182, 1189, 1192, 1193, 1195
 MGA.....1002, 1093, 1151
1157, 1158, 1178
 MGN Technology.....1009, 1178
 Midland.....1061
 Minolta.....1082, 1117, 1150, 1166
 Mitsubishi.....1002, 1019, 1039, 1053
1063, 1082, 1093, 1151, 1155, 1157
1158, 1161, 1210, 1211, 1255, 1256
 Montgomery Ward.....1029, 1094
 Motorola.....1029, 1114
 MTC.....1009, 1043, 1101, 1178, 1195
 Mtorola.....1143, 1155
 Multitech.....1009, 1037, 1043, 1061
1101, 1163, 1195
 NAP.....1141, 1142, 1143, 1145
1147, 1150, 1160, 1166
 NEC.....1000, 1039, 1053, 1060, 1074
1078, 1103, 1115, 1125, 1146
1148, 1149, 1161, 1165
 Nexxtech.....1049, 1085, 1086
 Nikko.....1017, 1145
 Nikon.....1142
 Noblex.....1009, 1178
 Nokia.....1230, 1253
 Nokia Oceanic.....1253
 Nordmende.....1240, 1241
 Philips.....1008, 1024, 1033, 1041, 1048
1062, 1068, 1107, 1114, 1132
 Okano.....1227, 1254, 1257
 Olympus.....1114, 1143
 Optimus.....1009, 1011, 1017, 1029
1073, 1106, 1108, 1130, 1145
1155, 1165, 1170, 1183, 1184
1188, 1190, 1191, 1192, 1193
 Optonica.....1009, 1094, 1159
 Orion.....1031, 1095, 1137
1171, 1181, 1185, 1258
 Panasonic.....1011, 1015, 1055, 1108
1114, 1130, 1131, 1143, 1170
1177, 1184, 1192, 1259, 1260
 Penney.....1143, 1145, 1146
1148, 1150, 1156, 1178
 Pentax.....1000, 1082, 1117, 1150, 1166
 Philco.....1015, 1016, 1048
1114, 1143, 1174
 Philips.....1159, 1164, 1168, 1232
1244, 1261, 1262, 1263
 Phonola.....1235, 1244, 1263
 Phoolips-Magnavox.....1029, 1048, 1062
 Pilot.....1017, 1145
 Pioneer.....1020, 1039, 1053
 Victor.....1082, 1128, 1134, 1161
 Polaroid.....1086
 Portland.....1001, 1111, 1139
 Profltronic.....1178
 Proscan.....1015, 1064, 1172
 Protec.....1037, 1163
 Pulsar.....1080, 1147
 Quarter.....1060, 1153
 Quartz.....1060, 1153

SETUP CODES FOR VCR

Quasar.....1011, 1015, 1108, 1114
1130, 1143, 1170, 1184, 1192
 Radio Shack.....1002, 1003, 1009, 1015
1017, 1029, 1043, 1050, 1059
1060, 1073, 1094, 1101, 1102
1114, 1118, 1130, 1189, 1195
 Radix.....1017
 Randex.....1017, 1145
 RCA.....1005, 1009, 1015, 1017, 1021, 1023
1034, 1058, 1061, 1064, 1079, 1082
1104, 1114, 1116, 1117, 1118, 1126, 1143
1150, 1155, 1166, 1167, 1172, 1178
 Realistic.....1002, 1003, 1009, 1015
1017, 1029, 1043, 1050, 1059
1060, 1094, 1101, 1106, 1114
1130, 1143, 1145, 1153, 1154
1155, 1159, 1160, 1165, 1195
 Replaytv.....1131
 Ricoh.....1129
 Ricon.....1142
 Ridix.....1145
 RIO.....1017, 1027
 Roadstar.....1225
 Runco.....1080, 1147
 SABA.....1240, 1241, 1264, 1265
 Salora.....1253
 Samsung.....1009, 1028, 1050, 1066, 1082
1088, 1089, 1120, 1133, 1152, 1178
1266, 1267, 1268, 1269, 1270
 Sanky.....1029, 1080, 1147, 1155
 Sansui.....1012, 1031, 1039, 1053, 1057
1095, 1125, 1149, 1161, 1179, 1185, 1195
 Sanyo.....1004, 1009, 1047, 1059, 1060
1153, 1154, 1165, 1178, 1230, 1271
 Schneider.....1232, 1244, 1272
 Scott.....1044, 1046, 1089, 1090
1093, 1105, 1123, 1151
1152, 1169, 1171, 1175, 1176
 Sears.....1003, 1012, 1017, 1041, 1048
1059, 1060, 1082, 1114, 1117, 1124
1128, 1130, 1143, 1145, 1150, 1153
1154, 1156, 1160, 1165, 1166, 1195
 SEG.....1229
 Seleco.....1225, 1226
 Semp.....1152
 Sharp.....1002, 1029, 1032, 1043, 1094
1097, 1106, 1111, 1155, 1159, 1253
 Shintom.....1037, 1052, 1072
1082, 1129, 1163
 Shogun.....1009, 1178
 Siemens.....1230, 1272
 Signature.....1043, 1143
 Singer.....1037, 1114, 1163
 Some models.....1196, 1197, 1198, 1199
1200, 1201, 1202
 Sonic Blue.....1131
 Sony.....1006, 1010, 1025, 1038, 1072
1083, 1084, 1098, 1119, 1127, 1129
1140, 1142, 1143, 1195, 1212, 1213
1214, 1215, 1216, 1217, 1218, 1219
1220, 1221, 1222
 STS.....1082, 1114, 1117, 1150
 Superscan.....1041
 Sylvania.....1015, 1030, 1041, 1043
1048, 1071, 1093, 1101, 1114
1143, 1151, 1164, 1168, 1195
 Symphonic.....1030, 1041, 1043
1101, 1188, 1195, 1206
 Taashiko.....1017
 Tandberg.....1237
 Tandy.....1043, 1060
 Tatung.....1125, 1149
 Teac.....1043, 1101, 1125, 1149, 1195
 Technics.....1114, 1143, 1147, 1170, 1172
 Technika.....1143, 1145, 1195
 Techwood.....1136
 Teknika.....1017, 1022, 1043, 1101, 1114
 Telefunken.....1265, 1273
 Thomas.....1195
 Thomson.....1238, 1240
 Thorn.....1230, 1243
 Tivo.....1107, 1119
 TMK.....1009, 1074, 1103, 1144, 1173, 1178
 Toshiba.....1003, 1014, 1048, 1066
1069, 1082, 1089, 1091, 1093
1102, 1105, 1151, 1152, 1160
1175, 1176, 1274, 1275
 Totevision.....1009, 1017, 1145, 1178
 Unitech.....1009, 1178
 Universum.....1243, 1244, 1258, 1273
 Vector.....1152
 Vector Research.....1000, 1039, 1053
1089, 1146, 1148
 Vediosonic.....1178
 Victor.....1039, 1053
 Video Concepts.....1000, 1002, 1039, 1053
1089, 1148, 1152, 1157, 1158
 Videosonic.....1009
 W.W. House.....1243
 Wards.....1002, 1009, 1015, 1017, 1029
1035, 1037, 1043, 1059, 1082, 1089
1094, 1101, 1105, 1114, 1117, 1143

SETUP CODES FOR VCR

.....1150, 1152, 1154, 1155, 1159, 1163
1164, 1176, 1178, 1195, 1263, 1276
 White Westinghouse.....1043, 1077
1180
 XR-1000.....1037, 1101, 1114, 1143
 XR-1001.....1163
 XR-1002.....1195
 Yamaha.....1000, 1039, 1053
1125, 1146, 1149
 Zenith.....1017, 1029, 1032, 1039, 1043
1045, 1051, 1053, 1062, 1065
1066, 1067, 1072, 1077, 1080
1095, 1110, 1112, 1122, 1129
1141, 1142, 1147, 1185, 1195

SETUP CODES FOR SAT

ADB.....	2325
Alfa.....	2247
Aiko.....	2241
Alfa gold.....	2234
ALL VISION.....	2354, 2355
Alphastar.....	2141, 2185
Amplica.....	2013
Astrad.....	2267, 2288, 2289, 2310, 2322
Astro Industries.....	2265
Bell Expressvu.....	2010, 2020, 2040, 2050
Best.....	2205
BSR.....	2265
CANAL+.....	2271
Capetronic.....	2265
Channel Master.....	2033, 2045, 2056
.....	2109, 2125
Chaparral.....	2066, 2076, 2112, 2123
.....	2125, 2126, 2159, 2175
Cheyenne.....	2076
Citoh.....	2186
DGTEC.....	2360, 2361, 2362
Digital satellite TV.....	2236, 2237
.....	2238, 2239
Directv.....	2008, 2023, 2024, 2026, 2028
.....	2036, 2041, 2051, 2061, 2064
.....	2073, 2082, 2084, 2092, 2093
.....	2095, 2101, 2102, 2105
Dish Network.....	2010, 2020, 2040, 2046
.....	2050, 2057, 2069, 2091, 2260
Dishpro.....	2010, 2046, 2057, 2069
Drake.....	2002, 2034, 2086, 2109
.....	2113, 2128, 2163, 2167, 2169
.....	2176, 2179, 2182, 2226, 2227
Drake satellite.....	2196, 2197, 2198
Dreambox.....	2072
DX Antenna.....	2044, 2088
Dx Antenn.....	2110
DX Communications.....	2177
Echosphere.....	2050
Echostar.....	2010, 2020, 2040, 2046
.....	2050, 2057, 2069, 2091, 2118
.....	2120, 2129, 2142, 2160, 2172
.....	2206, 2210, 2213, 2214, 2215
.....	2216, 2217, 2220, 2221
.....	2222
Equus.....	2171
Eurostar.....	2223
Expressvu.....	2010, 2020, 2040
.....	2050, 2142
Fortec star.....	2011, 2021, 2031, 2043
.....	2054, 2055, 2232, 2233
Fujitsu.....	2079, 2089, 2156
Galaxis.....	2275, 2277, 2279, 2291
.....	2295, 2296, 2317, 2335
GE.....	2028, 2039, 2063, 2075
.....	2085, 2092, 2095, 2105
Gemini.....	2015
General Instrument.....	2131, 2152, 2153
.....	2154, 2178, 2187, 2188
General Instrument (GI).....	2001, 2009
.....	2012, 2019, 2022, 2038, 2052
.....	2074, 2094, 2099, 2104
Globecast.....	2000
GO Video.....	2071
Gold box.....	2301
Grundig.....	2291, 2292, 2300, 2328
HIRSCHMANN.....	2326
Hitachi.....	2036, 2051, 2061, 2073
.....	2084, 2093, 2144, 2254
Homecable.....	2127
HTS.....	2142, 2173
Hughes Network.....	2036, 2051, 2061
.....	2065, 2068, 2082, 2084, 2093
Hughes Network Sys.....	2140
Hughes satellite.....	2254, 2261, 2262
HUMAX.....	2356
Hylek.....	2265
Hyundai.....	2308
Instrument.....	2135
Intersat.....	2174
IQ.....	2124
IQ Prism.....	2124
Janeil.....	2119, 2156
Jerrold.....	2131, 2135, 2303
JVC.....	2050, 2091, 2142, 2260
Kathrein.....	2287, 2307, 2313
Kenwood.....	2047, 2157
Legend.....	2129, 2160
Luxor.....	2058
Macom.....	2070, 2109, 2150, 2154, 2187
Macom satellite.....	2195
Magnavox.....	2023, 2062, 2091
.....	2138, 2139, 2263
Matsui.....	2290
MAXTRONICS.....	2358
Memorex.....	2129, 2139
Micro formula.....	2228
MICRONAX.....	2357
Mina.....	2224
Mitsubishi.....	2036, 2051, 2061
.....	2073, 2084, 2093, 2225
Motorola.....	2049, 2052, 2146

SETUP CODES FOR SAT

NEWLING.....	2359
Nikko.....	2286
Nokia.....	2264, 2282, 2302
.....	2320, 2338, 2339
Norstat.....	2080
NTVplus.....	2305
Orb.....	2165
Orbit.....	2219
Pace.....	2006, 2016, 2029, 2246, 2252
.....	2280, 2281, 2285, 2323, 2324
Panaset.....	2244
Panasonic.....	2024, 2025, 2027
.....	2119, 2137, 2149, 2330
Pansat.....	2003, 2106, 2162, 2181, 2208
Pbi.....	2228
Philips.....	2023, 2036, 2051, 2061
.....	2062, 2073, 2082, 2084, 2091
.....	2093, 2122, 2138, 2139, 2231
.....	2251, 2263, 2318, 2340
Philips-Magnavox.....	2023, 2062, 2091
Pioneer.....	2005
President.....	2114
Primestar.....	2038, 2074
.....	2131, 2135, 2207
Prosat.....	2096, 2202
Proscan.....	2028, 2039, 2075, 2085
.....	2095, 2105, 2134
Quick draw.....	2177
Radio Shack.....	2134, 2152, 2153
Radix.....	2276, 2289, 2294, 2316
RCA.....	2028, 2039, 2042, 2053, 2063
.....	2075, 2085, 2092, 2095, 2105, 2117
.....	2133, 2134, 2145, 2200, 2240, 2251
RCA DSS.....	2255, 2256, 2257
RC-AK.....	2209
Realistic.....	2032, 2100, 2115
Rural cable.....	2152
SABA.....	2273, 2274, 2293, 2297
.....	2298, 2311, 2333, 2348
Samsung.....	2004, 2026, 2060, 2098
.....	2101, 2185, 2212, 2349, 2350
Scientific Atlanta.....	2203, 2240
Sharp.....	2005
Sierra I II III.....	2076
Signal super LT 930.....	2211
Skardin.....	2248, 2249, 2250
Sky Master.....	2268, 2283, 2284
.....	2309, 2329, 2347
SKY Network.....	2006, 2016, 2029
Some models.....	2199, 2229
Sony.....	2014, 2041, 2064, 2090
.....	2102, 2136, 2266, 2306, 2321
Space TV.....	2230
Star Sight.....	2103
Star Trak.....	2048, 2121, 2155
.....	2183, 2184, 2189
Starchoice.....	2019, 2038, 2074
STRONG.....	2351, 2352, 2353
STS.....	2044, 2067, 2077
.....	2110, 2124
STS satellite.....	2194
Sun Moon Star.....	2245
Super Guide.....	2059
Superguide.....	2158, 2166
Sylvania.....	2078
Tadiran.....	2242
Technisat.....	2304, 2315, 2341
.....	2342, 2220
Tedex.....	2218
Thomson.....	2251, 2297, 2334, 2336
.....	2337, 2345, 2346
Toshiba.....	2007, 2017, 2036, 2051
.....	2061, 2073, 2083, 2084, 2087
.....	2093, 2116, 2195, 2258, 2259
Tosonic.....	2143
TPS.....	2319
UEC.....	2253
Ultimate TV.....	2064, 2105
Uniden.....	2081, 2097, 2103, 2111, 2114
.....	2115, 2127, 2132, 2138, 2139
.....	2151, 2158, 2160, 2168, 2170
United.....	2035
United satellite.....	2191, 2193
Veccom.....	2228
Video Cipher II.....	2002
Video pall.....	2156
Viewstar.....	2180
Vortec.....	2235
Watson.....	2269
WEB TV.....	2014, 2091
Winner.....	2201, 2204
Zehnder.....	2272, 2278, 2312, 2314
.....	2327, 2331, 2332, 2343, 2344
Zenith.....	2002, 2008, 2015, 2018, 2029
.....	2030, 2034, 2037, 2086, 2113
.....	2128, 2146, 2156, 2195
Zenith satellite.....	2190, 2196, 2197
.....	2198

SETUP CODES FOR CBL

ABC.....	5000, 5007, 5013, 5045, 5060
.....	5066, 5068, 5069, 5070, 5071
.....	5073, 5074, 5076, 5115, 5116, 5164
Adelohia.....	5050, 5057
Aeon.....	5148
Alfa.....	5158, 5169, 5171, 5173
Aikotec.....	5181, 5182
Allegro.....	5005, 5011, 5090, 5098
Americast.....	5024
Antena.....	5180
Antronix.....	5025, 5031, 5080, 5092
AP0.....	5141
Archer.....	5025, 5031, 5038, 5046
.....	5080, 5090, 5092, 5108
Asia.....	5165
Asiagiant-777.....	5151
AT&T.....	5050
Atlanta.....	5070, 5076, 5102, 5168, 5172
Belcor.....	5086
Bell South.....	5024
Bell&Howell.....	5074
Best.....	5118
Cable star.....	5086
Cabletenna.....	5025, 5080
Cableview.....	5025, 5080
Cablevision.....	5017
Century.....	5046, 5090, 5159
Citizen.....	5046, 5090, 5098
Cogeco.....	5050
Color Voice.....	5053, 5061, 5082, 5084
Comtronics.....	5001, 5008, 5085
Contec.....	5014, 5077
Cs-100.....	5138
Digi.....	5107
Digital Music Express.....	5004
DVB-1.....	5185
DVB-2.....	5186
DVB-3.....	5187
DVB-LK05.....	5188
DVB-LK06.....	5189
DVB-LK07.....	5190
DVB-LK08.....	5200
DVB-LK09.....	5201
DVB-LK10.....	5202
DVB-LK11.....	5203
DVB-LK12.....	5204
DVB-RC03.....	5205
Eastern.....	5020, 5067, 5128, 5129
.....	5130, 5131, 5147, 5152
Emerson.....	5108
Everquest.....	5001, 5075, 5085
Focus.....	5099
G.I.....	5071, 5096, 5101, 5111
.....	5112, 5113, 5175, 5176, 5177, 5178
Garrard.....	5046, 5090
GC Electronics.....	5031, 5086, 5092
GE.....	5036
Gemini.....	5019, 5032, 5075
General Instrument (GI).....	5000, 5004
.....	5007, 5030, 5035, 5043
.....	5045, 5050, 5052, 5060, 5064
GMI.....	5119, 5139, 5149
Golden.....	5166
Goldstar.....	5085, 5089
Goodmind.....	5108
Hamlin.....	5020, 5039, 5045, 5047
.....	5054, 5078, 5095, 5110
.....	5256, 5257, 5258, 5259, 5260
Hitachi.....	5060, 5071
Hytex.....	5069
IEEC.....	5127, 5136, 5137, 5157
Illico.....	5017
IMC.....	5174
Jasco.....	5046, 5075, 5090, 5098
JEBSEE.....	5143
Jerrold.....	5000, 5007, 5018, 5030, 5035
.....	5042, 5045, 5060, 5068, 5071, 5072
.....	5074, 5075, 5096, 5101, 5111, 5112
.....	5113, 5117, 5155, 5156, 5163, 5179
Jerrold/G.I.....	5235, 5236, 5237, 5238
.....	5239, 5240, 5241, 5242
.....	5252, 5265, 5266
KOKA.....	5123, 5126
LEON.....	5119, 5139
Linsay.....	5184
Magnasonic.....	5083
Magnavox.....	5009, 5074, 5083
Mechanics.....	5099
Memorex.....	5015, 5109
Moovie Time.....	5021
Motorola.....	5000, 5007, 5018, 5030, 5035
.....	5043, 5050, 5052, 5060, 5065
Movie Time.....	5087, 5183
NAP.....	5069
NET.....	5264
Novaplex.....	5106
NSC.....	5021, 5087, 5183
OAK.....	5014, 5033, 5069, 5077
OAK Sigma 500.....	5121
Optimus.....	5079
Pace.....	5059

SETUP CODES FOR CBL

Panasonic.....	5253, 5254, 5029
.....	5037, 5079, 5088, 5109
Panther.....	5107, 5162
Paragon.....	5015, 5027, 5109
.....	5161, 5167
Philips.....	5009, 5032, 5040, 5046
.....	5048, 5055, 5082, 5083, 5084, 5090
Philips-Magnavox.....	5006, 5010
Pioneer.....	5002, 5017, 5026, 5062
.....	5081, 5089, 5105
Popular.....	5099
Proscan.....	5079
Pulsar.....	5015, 5109
Qak.....	5261, 5262, 5263
Radio Shack.....	5045, 5006, 5010
.....	5011, 5075, 5098, 5108
RCA.....	5023, 5037, 5046, 5079
Realistic.....	5031, 5092
Recoton.....	5099
Regal.....	5054, 5078, 5095
.....	5256, 5257, 5258
Regency.....	5020, 5067
Rembrandt.....	5060, 5071
Rogers.....	5017
Runco.....	5015, 5109
Samsung.....	5001, 5002, 5085, 5089
Scientific atlanta.....	5243, 5244, 5245
Scientific Atlanta.....	5012, 5013, 5016
.....	5017, 5022, 5028, 5057, 5114, 5170
Seam.....	5103
Sg.....	5132
Shaw.....	5050
Signal.....	5001, 5075, 5085
Signature.....	5060, 5071
Skygiant.....	5133, 5134, 5135
SL Marx.....	5001, 5085
Sprucer.....	5037, 5079
Standard.....	5034
Starcom.....	5030, 5045, 5068, 5075
Stargate.....	5001, 5085, 5108
Starquest.....	5075
Starsight.....	5023
Sylvania.....	5066
TADA.....	5120, 5154
Taicom.....	5123, 5140
Tandy.....	5041, 5094
Tay Shoen.....	5142, 5145
Television.....	5001, 5085
Texscan.....	5034, 5066
TFC.....	5097
Timeless.....	5100
Time Warner.....	5017
Tocom.....	5000, 5031, 5042, 5046, 5049
.....	5065, 5072, 5073, 5250, 5251, 5265
Toshiba.....	5015, 5109
Trans.....	5144, 5146, 5150, 5153, 5160
Tusa.....	5075
Tv86.....	5021, 5087
Unika.....	5025, 5031, 5046
.....	5080, 5090, 5092
United artists.....	5069
United Cable.....	5045
Universal.....	5005, 5025, 5031, 5038
.....	5046, 5056, 5080, 5086, 5090
.....	5091, 5092
Videotech.....	5044
Videotron.....	5017
Videoway.....	5003, 5093
Viewstar.....	5008, 5009, 5021, 5041
.....	5083, 5087, 5094
Winer.....	5122
WISO.....	5124, 5125
Zenith.....	5011, 5015, 5046, 5051, 5057
.....	5058, 5063, 5070, 5075, 5092
.....	5104, 5109
Zenith Network.....	5024
Zentek.....	5099
Foshan.....	5226
Guangxi.....	5232
Guangzhou.....	5217
Haerbin.....	5224
Hangzhou.....	5228
Hebeineimenggu.....	5229
Linyi.....	5220
Nanhai.....	5225
Shandong zibo.....	5221
.....	5222, 5223, 5227
Shanghai.....	5230
Shenzhen.....	5218
Sichuan.....	5233
Tianjin.....	5219
Hongkong.....	5216
Hongkong NOW.....	5215
Hongkong kuanpin.....	5231

SETUP CODES FOR DVD

Advent	3151
Afreedy	3057
Aierprince	3458, 3459
AIKO	3571
Aiwa	3003, 3275, 3341, 3542
Akai	3019, 3023, 3279, 3398
AKISHI	3573
AKUSTIC	3571, 3650
Ames	3127
Amoi	3503, 3504, 3506, 3527
AMW	3064, 3082
Anaba	3137
Aone	3691
Apex	3004, 3024, 3037, 3042, 3061
	3084, 3094, 3096, 3102, 3106
	3110, 3123, 3124, 3140, 3167
	3274, 3276, 3325, 3574
Aspire	3169
A-trend	3158
Audelong	3708
AUDIA	3690
Audiovox	3133, 3575
AVLIGHT	3535
Axion	3133
B&K	3088
BBK	3410, 3413, 3419, 3420
	3425, 3440, 3470, 3483, 3486
	3491, 3537, 3679, 3704
Blaupunkt	3110
Bodysonic	3057
Bose	3147, 3358
Boss	3132
BROCSOHC	3378
Broksonic	3001, 3069, 3152
BULANTE	3456, 3457
CAIXING	3480, 3487
CAT	3362
Centrios	3095, 3133, 3136, 3175, 3176
	3178, 3179, 3184, 3187, 3189, 3193
	3197, 3201
Changhong	3124, 3528, 3529
	3530
CHESTRON	3361
Cinevision	3020
Citech	3206
Citizen	3206
Classic	3124, 3127, 3196, 3576
	3662, 3663
Coby	3008, 3024, 3047, 3048
	3050, 3067, 3083, 3577
Concept	3110
Criterion	3078
Curtis International	3083, 3100
Cyberhome	3017, 3101, 3158
	3356, 3578
Cytron	3043, 3072
D.L.K.	3363
Daewoo	3006, 3034, 3111
	3128, 3138, 3278, 3299
	3304, 3324, 3478, 3479, 3579
	3580, 3581, 3582, 3583, 3584
	3585, 3586, 3659, 3671, 3717
Denon	3107, 3126, 3272, 3302
	3332, 3343, 3587
Denzel	3076
Desay	3086, 3315
DESAY	3418, 3466, 3509, 3692
Diamond vision	3045, 3085, 3148
Digitrex	3024
Digix	3012
DIGIMEDIA	3588
Dihe	3462, 3469, 3499, 3709
Ding Tian	3519
Disney	3079
Dual	3000, 3043, 3051, 3060, 3076
Durabrand	3020, 3043, 3095
DVD	3408, 3411, 3653
DVD 2000	3141
ELEKTRA	3584
Elta	3005, 3023, 3277, 3282, 3364
Emerson	3020, 3044, 3079, 3097
	3118, 3283
ESA	3051
F & D	3677
Fahrenheit	3120
Fisher	3040, 3284, 3625, 3654
Funai	3044, 3079, 3383
FUSSION	3590
GE	3091, 3110, 3298, 3623
GeWang	3720
GIEC	3481, 3684, 3686
	3687, 3688, 3702, 3714
GO VIDE	O3591, O3592
Goldstar	3020
GoldStar	3381
GO-Video	3007, 3025, 3041, 3056
	3066, 3127, 3131, 3138
	3149, 3269, 3285
GPX	3013, 3049, 3593
Gradiente	3021
Greenhill	3110
Grundig	3352

SETUP CODES FOR DVD

GVC	3681, 3682
Haaz	3129, 3146
Haier	3031, 3508, 3538
Haoji	3460
HARMAN	3668
Harman Kardon	3058
	3270, 3288, 3344
Himage	3517
HISENSE	3526, 3535, 3703
Hitachi	3002, 3056, 3076
	3092, 3268, 3296
	3334, 3594
Hiteker	3024
HITER	3481
HUABAO	3421, 3453, 3454
	3455, 3694
Humax	3150
HYUNDAI	3477
IDALL	3520
ILO	3103, 3194
Infinity	3057
Initial	3110, 3194
Insignia	3020, 3028, 3044, 3110, 3133
Integra	3143, 3307
JAMO	3359
JBL	3058
Jingewangpai	3423
JingWei	3403
Jugao	3710
JVC	3015, 3039, 3075, 3114, 3168
	3202, 3267, 3293, 3333, 3372
	3437, 3543, 3595, 3667
Jwin	3027, 3106, 3165
Kawasaki	3032, 3095
Kenwood	3093, 3107, 3265, 3272
	3316, 3355, 3467, 3596
	3597, 3598
Ketal	3422
Kiss	3076
KLH	3037, 3046, 3110, 3336
Konka	3028, 3108, 3125
	3142, 3160, 3297, 3301
	3306, 3311, 3531, 3599
Koss	3021, 3072
KXD	3008
LAFAYETTE	3617
Lasonic	3085, 3129
	3600, 3610
Lennox	3023, 3134
LG	3020, 3063, 3156, 3381, 3400
LINITRON	3633
Linn	3163
Liquidvideo	3133
Liteon	3080, 3103
	3149, 3157, 3190
LONGZHIPAI	3676
Magnavox	3010, 3029, 3044, 3073
	3074, 3104, 3105, 3122
	3139, 3261, 3291, 3292, 3317
MAJESTIC	3602, 3657
Malata	3394, 3401, 3415
	3416, 3465, 3538, 3539
Marantz	3543, 3689, 3705
	3020, 3073
	3074, 3139, 3161
	3291, 3292, 3603
	3604, 3605, 3619
Matsui	3351, 3389
Maxent	3168
Medion	3043, 3045, 3103, 3132, 3166
MEGA TANS	3606
Memorex	3043, 3192, 3319
Meridian	3073
Microsoft	3091
Microsoft X-BOX	3318, 3326
Mintek	3110, 3320
Mitsubishi	3141, 3262, 3607
MITSUMI	3608, 3609, 3661
MITZU	3571, 3643
MTB	3610
Mustek	3127, 3303, 3357
Myron & Davis	3155
NAD	3020, 3162, 3313
Nakamichi	3144, 3308, 3353, 3612
NAPA	3613, 3669
Nesa	3110, 3155
Nexstech	3012, 3014, 3033, 3051
	3095, 3102, 3154, 3175
	3176, 3178, 3181, 3183
	3200, 3205
NINTAUS	3395, 3427, 3463
	3471, 3472, 3473, 3474
	3482, 3485, 3521, 3522
	3683, 3712, 3714
Norcent	3030, 3048, 3065
	3083, 3157, 3614
OKON	3464
Onkyo	3035, 3143, 3261
	3307, 3342, 3435, 3615, 3616
Optimus	3002, 3263, 3268
Orion	3001, 3021, 3193, 3280
Pacific	3043

SETUP CODES FOR DVD

PAI GAO	3719
Panasonic	3016, 3038
	3054, 3059, 3107, 3119
	3121, 3272, 3300, 3328
	3332, 3369, 3370, 3371
	3377, 3380, 3390, 3406
	3596, 3665, 3666
PANDA	3430, 3443, 3444
	3445, 3494, 3497
PHILCO	3617, 3618, 3655, 3660, 3664
Philips	3026, 3044
	3073, 3074, 3079, 3104
	3105, 3122, 3139, 3161
	3261, 3273, 3291, 3292
	3312, 3338, 3384, 3391
	3404, 3535, 3544, 3545
	3546, 3619, 3656
PHILIPS KARAOKE	3620
Philips-Magnavox	3073, 3074, 3105
	3122, 3161
Pioneer	3002, 3052, 3070
	3087, 3098, 3159, 3177
	3263, 3268, 3322, 3330
	3345, 3347, 3368, 3385
	3386, 3436, 3621
Piva	3180
Polaroid	3018, 3068, 3102
Polk Audio	3073, 3074, 3139
Portland	3023
POWER SOUND	3571
PRIMAS	3360
Proline	3021
Proscan	3091, 3113, 3310
Prosonic	3048, 3644
Pyle	3115
QI Sheng	3397, 3429, 3484, 3490
	3493, 3674, 3697, 3698
	3699, 3700, 3715, 3723
Radio Shack	3095, 3099, 3116, 3164
Radioshack	3305, 3314
RCA	3091, 3095, 3110, 3113
	3116, 3164, 3298, 3305
	3310, 3314, 3331, 3622, 3623
Regent	3134
Reoc	3129
RIO	3020
RJ Technology	3182
rosen	3117
Rotel	3039
ROYAL	3617, 3664
Saba	3099
Sampo	3057, 3287
Samsung	3007, 3025, 3056
	3130, 3153, 3172, 3269
	3340, 3376, 3396, 3398
	3409, 3441, 3496, 3541
	3594, 3624, 3658
Sansui	3001, 3069, 3323, 3405
Sanyo	3009, 3040, 3625, 3626
SAST	3403, 3412, 3430, 3451
	3452, 3468, 3532, 3534, 3680
Sears	3001, 3044
SEG	3076, 3294
Selectron	3185, 3188, 3191
	3195, 3199, 3203, 3207
Sharp	3055, 3062, 3081
	3286, 3321, 3337, 3382
	3627, 3628, 3629
Sherwood	3022, 3281
	3711
Shico	3393, 3402, 3500
	3110, 3298, 3348
Shinsonic	3110
SHUMALING	3428
SKYWORTH-RGB	3414, 3417
	3424, 3426, 3450, 3488, 3489, 3492
	3511, 3513, 3685, 3693, 3706, 3713
SMC	3630
Sonashi	3696
Sonic Blue	3066
SONICO	3651
Sony	3036, 3053, 3071, 3072
	3089, 3090, 3264, 3327
	3349, 3350, 3365, 3366
	3367, 3375, 3432, 3434
	3569, 3570, 3652
SOUND TRACK	3649
Soundstorm	3115, 3132
SOWA	3547
Star	3510
Sungale	3171
Superscan	3044
Supersonic	3013, 3617, 3631, 3664
Sv2000	3044
SVA	3500
Sylvania	3044, 3079, 3346, 3379, 3383
Symphonic	3044, 3079, 3097
TCL	3392, 3407, 3431, 3446
	3447, 3512, 3707
Teac	3002, 3095, 3268, 3354, 3632
Technics	3107, 3272
Techwood	3162, 3198

SETUP CODES FOR DVD

Terapin	3170
Tevion	3043, 3060, 3072, 3078
	3112, 3129, 3146
Theta Digital	3002, 3268
Thomson	3339, 3388
THOMSON	3475, 3622
THOSHIBA	3433, 3461, 3634
	3635
TIANLI	3523
Tivo	3098, 3150
TOP TEC	3633
Toshiba	3001, 3011, 3073, 3173, 3174
	3261, 3290, 3329, 3373, 3374, 3387
Trex	3135
Trutech	3204
TSINGHUA TONGFANG	3448
	3449, 3701
UNIREX	3636
United	3095
UNITRON	3633
VCD2	3637
Venturer	3095
Victor	3439, 3476, 3495
VIDEO CD	3645, 3646, 3647, 3648
Vifa	3442
VOX	3638
WANBAO	3688
Wanyan	3518
WEGA TANS	3670
Wharfedale	3057, 3145, 3309
White Westinghouse	3079
X-BOX	3091
Xenius	3072
Xian pai	3462
Yamaha	3074, 3105, 3107, 3109
	3122, 3266, 3272, 3332, 3670
Yamakawa	3076, 3077, 3186
	3295, 3640
YMT	3695
YOUNISHEN	3507
Zenith	3020, 3063, 3261, 3271
	3283, 3289, 3335, 3381
ZONDA	3641, 3642
Other	3399, 3408, 3411, 3498, 3501
	3502, 3505, 3514, 3515, 3524, 3525
	3533, 3536, 3540, 3549, 3550, 3551
	3552, 3553, 3554, 3555, 3556, 3557
	3558, 3559, 3560, 3561, 3562, 3563
	3564, 3565, 3566, 3567, 3568, 3637
	3653, 3672, 3673, 3716, 3721, 3722
	3724, 3538, 3548, 3589, 3611

SETUP CODES FOR CD

ADC.....	4051,4116
Adcom.....	4002,4077,4132,4145
Aiwa.....	4035,4098,4100
.....	4115,4129,4134
Akal.....	4016,4037,4075,4133
Audio Alchemy.....	4142
Audio Technica.....	4011,4136
BSR.....	4142,4147
Burmester.....	4157
California Audio Labs.....	4025,4118
Capetronic.....	4052
Carrera.....	4142
Carver.....	4019,4020,4031,4041
.....	4134,4139,4160
Casio.....	4039
Centrios.....	4109
Citizen.....	4027
Crown.....	4128,4128
Curtis Mathes.....	4039,4118
DAK.....	4147
DBX.....	4148
Demon.....	4113
Denon.....	4063,4170
DKK.....	4112
Emerson.....	4077,4101,4132
.....	4135,4152,4162
Fisher.....	4012,4021,4031,4032
.....	4045,4125,4139,4153
Garrard.....	4147,4149,4155,4157,4158
GE.....	4114
Genexxa.....	4042,4057,4101
.....	4119,4135,4152
Goldstar.....	4068,4156
Harman Kardon.....	4064,4079
.....	4134,4137,4159
Hitachi.....	4042,4119,4132
Inkel.....	4078
JC Penny.....	4039,4065
JVC.....	4089,4110,4123
Kenwood.....	4013,4036,4046,4049
.....	4053,4102,4117,4120
.....	4141,4164,4167
Kodak.....	4150
Krell.....	4020,4134
Kyocare.....	4116
Kyocera.....	4051
Linn.....	4134
Luxman.....	4022,4033,4047,4058,4126
LXI.....	4039,4152
Magnavox.....	4020,4073,4083
.....	4134,4152
Magnavox CD-R.....	4163
Marantz.....	4020,4043,4054
.....	4094,4118,4134,4140
McIntosh.....	4150
MCS.....	4039,4065,4118,4121
MGA.....	4079
Mission.....	4020,4134
Mitsubishi.....	4079,4090
MTC.....	4157
NAD.....	4082,4108
Nakamichi.....	4000,4087,4103,4131
NEC.....	4065,4121,4145
Nexxtech.....	4009,4048,4060
.....	4061,4072,4088,4096
Nikko.....	4012,4021,4101,4135,4136
NSM.....	4020,4134
Onkyo.....	4014,4023,4086
.....	4093,4127,4169
Optimus.....	4005,4031,4034,4038,4041
.....	4042,4044,4053,4055,4066
.....	4085,4112,4119,4120,4124
.....	4130,4138,4139,4142,4143
.....	4149,4152,4153,4157,4159
.....	4160,4161
Panasonic.....	4025,4070,4074,4099
.....	4107,4118,4151,4154,4165
Paramount Pict.....	4171
Parasound.....	4142,4157
Philips.....	4019,4020,4083
.....	4134,4150,4163
Pioneer.....	4030,4040,4042,4057
.....	4071,4080,4091,4119
.....	4146,4152,4161
Proscan.....	4122
Proton.....	4020,4134
QED.....	4134
Quasar.....	4025,4118
Radio Shack.....	4010,4024,4026
.....	4030,4041,4050,4055,4071
RCA.....	4008,4010,4018,4030,4031
.....	4071,4077,4104,4106,4111,4114
.....	4122,4132,4139,4152,4166
Realistic.....	4031,4034,4042,4052
.....	4054,4055,4077,4101,4132
.....	4135,4138,4139,4140,4157
Rotel.....	4020,4134,4157
SAE.....	4020,4134
Samsung.....	4084
Sansui.....	4001,4004,4020,4106
.....	4134,4144,4152

SETUP CODES FOR CD

Sanyo.....	4015,4017,4031
.....	4045,4095,4124,4139
Scott.....	4077,4101,4132,4135,4152
Sears.....	4039,4053,4054,4152
Sharp.....	4053,4054,4120,4140,4168
Sherwood.....	4024,4044,4054
.....	4062,4078
Shure.....	4065
Sony.....	4007,4035,4073,4097,4112
STS.....	4051
Sylvania.....	4020
Symphonic.....	4056
Teac.....	4021,4029,4054,4055
.....	4056,4067,4081
Technics.....	4025,4074,4099,4107
Theta Digital.....	4083
Toshiba.....	4082
Victor.....	4089
Yamaha.....	4003,4013,4028
.....	4092,4105
Zenith.....	4006,4021,4059
.....	4069,4076

SETUP CODES FOR AMP

Aiwa.....	6086,6099,6111,6123,6158
Apex.....	6032
Apple ipod.....	6029
Bose.....	6115,6161
Carver.....	6023,6150
Centrios.....	6008,6138
Citizen.....	6041
Criterion.....	6060
Curtis Mathes.....	6151
Delphi.....	6082
Denon.....	6052,6124,6131,6144
Fisher.....	6005,6109
GE.....	6141
Goldstar.....	6037
Harman Kardon.....	6004,6069
Ipod.....	6010
JVC.....	6084,6095,6132,6154
Kenwood.....	6040,6068,6070,6089
.....	6122,6128,6155,6156
Koss.....	6038,6150
Linn.....	6150
Luxman.....	6145
Magnavox.....	6005,6031,6036
.....	6038,6150
Marantz.....	6006,6061,6150,6153
Mitsubishi.....	6058
NAD.....	6077,6103,6129
Nakamichi.....	6153
NEC.....	6149,6015
Nexxtech.....	6008,6066,6081,6085
.....	6094,6112,6118,6138
Norcent.....	6059
Onkyo.....	6021,6108,6120,6126
Optimus.....	6002,6046,6048,6063
.....	6078,6104,6116,6130,6157
Panasonic.....	6009,6022,6096,6101
.....	6106,6114,6133,6136,6152
Parasound.....	6148
Philips.....	6005,6006,6017,6023
.....	6133,6150
Pioneer.....	6045,6054,6056,6075
.....	6137,6140,6151
Radio Shack.....	6002,6027,6028,6034
.....	6039,6045,6056,6074
.....	6075,6090,6130
RCA.....	6020,6025,6028,6030,6035
.....	6045,6047,6053,6057,6075,6076
.....	6090,6100,6105,6113,6117,6125
Realistic.....	6121,6157
RIO.....	6012
Saba.....	6011
Samsung.....	6000
Sansui.....	6139,6153
Sanyo.....	6014
Scott.....	6064
Sharp.....	6001,6083,6102
Sherwood.....	6034,6039,6073,6088
Shure.....	6149
Skyfi.....	6015
Sony.....	6007,6019,6024,6042,6050
.....	6065,6067,6080,6082
.....	6091,6127,6134,6135,6147
Soundesign.....	6141,6146
TAO.....	6015
Teac.....	6026,6044,6051,6056,6092
Technics.....	6009,6022,6096,6106
.....	6133,6136,6152,6160
Tevion.....	6060
Venturer.....	6016
Victor.....	6154
Wards.....	6140,6141,6146
XM Radio.....	6015
Yamaha.....	6043,6055,6071,6072,6087
.....	6097,6107,6110,6119,6142
.....	6143,6155,6159
Zenith.....	6003,6005,6012,6018,6033
.....	6037,6049,6078,6079,6093,6098

SETUP CODES FOR AUX

TAPE	
Carver.....	8113
Denon.....	8111
Harman/Kardon.....	8113
Magnavox.....	8113
Marantz.....	8113
Philips.....	8113
Sony.....	8115

CASSETTE DECK

Aiwa.....	8096,8097,8133
Akal.....	8104
Carver.....	8133
Denon.....	8089
Fisher.....	8088
Garrard.....	8106,8108
Garman/Kardon.....	8133
JVC.....	8101,8102
Kenwood.....	8086,8087
Magnavox.....	8133
Marantz.....	8084,8133
Mitsubishi.....	8104
Onkyo.....	8092,8093,8103
Optimus.....	8085
Philips.....	8133
Pioneer.....	8085
Sansui.....	8084,8133
Sherwood.....	8107
Sony.....	8094,8100,8105
Teac.....	8106
Technics.....	8099
Victor.....	8102
Wards.....	8085
Yamaha.....	8090,8091

HOME AUTOMATION

GE.....	8110
Lite Touch.....	8109
Radio Shack.....	8110
GE HOME MINDER.....	8004
HOME AUTOMATION.....	8005
X10(NEC).....	8006

TURNTABLE

Aiwa.....	8114
Carver.....	8114
Magnavox.....	8114
Marantz.....	8114
Philips.....	8114
Sony.....	8115

VIDEO

Archer.....	8116
GC Electronics.....	8116
Jebsee.....	8116
Magnavox DSS.....	8128
Panasonic DVR.....	8142
Philips.....	8128
Philips DVR.....	8141
Philips/Magnavox.....	8128
Philips Web TV.....	8129
Radio Shack.....	8116
Replay DVR.....	8143
Sony DVR.....	8138,8139,8140
Sony Web-TV.....	8118
TeleCaption.....	8117
Web TV.....	8129
Web Video STB-2010.....	8134

AUDIO

Aiwa.....	8119,8123,8125
Fisher.....	8120
Harman/Kardon.....	8127
JBL.....	8127
JVC.....	8122
Nikko.....	8124
Paramount Pict.....	8211
Philips.....	8127,8144
Polytek.....	8145
RCA.....	8121
Schneider.....	8124
Scientific Atlanta.....	8126
Sony.....	8119
Soundesign.....	8124
SSI.....	8211

LD

Aiwa.....	8014
Carver.....	8009,8012,8017
Denon.....	8000,8008,8010
Disco vision.....	8007
Funai.....	8014
Harman/Kardon.....	8012
Hitachi.....	8007
Magnavox.....	8012,8016
Marantz.....	8009,8012
Mitsubishi.....	8008
NAD.....	8008
Panasonic.....	8015

SETUP CODES FOR AUX

Philips.....	8009,8012
Pioneer.....	8000,8007,8008
Proscan.....	8001
Quasar.....	8015
RCA.....	8001,8137
Realistic.....	8014
Samsung.....	8017
Sanyo.....	8002,8136
Sega.....	8007
Sony.....	8003,8011,8013
Technics.....	8015
Theta Digital.....	8012
Yamaha.....	8016
Zenith.....	8002,8012,8136

TUNER/RECEIVERS

ADC.....	8076
Adcom.....	8077
Aiwa.....	8041,8045,8052,8069,8130
Akal.....	8036,8056
Archer.....	8116
Capetronic.....	8076
Carver.....	8028,8032,8052,8066,8130
Curtis Mathes.....	8031,8037
Denon.....	8027,8058,8081
Emerson.....	8070
Fisher.....	8032,8055,8066,8082
Garrard.....	8070,8071
Harman/Kardon.....	8040,8052,8130
.....	8131
Inkel.....	8034
JBL.....	8040
JVC.....	8035
Kenwood.....	8030,8032,8036,8051
.....	8060,8061
Kodak.....	8066
Krell.....	8046
Kyocare.....	8027
Linn.....	8052,8130
LXI.....	8050
Magnavox.....	8042,8052,8068
.....	8076,8130
Marantz.....	8031,8042,8052,8130
MCS.....	8031,8064
NAD.....	8062
Nakamichi.....	8038,8065
NEC.....	8057
Onkyo.....	8039,8043,8067
Optimus.....	8032,8037,8049,8050,8051
.....	8055,8076,8079,8080,8082,8132
Panasonic.....	8031,8059,8074
Philips.....	8052,8068,8130
Pioneer.....	8029,8037,8044,8076
.....	8078,8132
Proscan.....	8033
Quasar.....	8031
RCA.....	8033,8064,8066,8075,8076
Realistic.....	8046,8050
Sansui.....	8052,8064,8130
Sanyo.....	8054,8082
Scott.....	8046,8063
Sharp.....	8051
Sherwood.....	8034,8072,8073
Siemens.....	8070
Sony.....	8045,8047
Soundesign.....	8079
Teac.....	8046,8071
Technics.....	8031,8054,8059,8074
Victor.....	8035
Wards.....	8029,8032,8033,8037
.....	8045,8052,8130
Yamaha.....	8048,8051
Zenith.....	8083

SETUP CODES FOR AC

ALPIN.....	9115
AMICO.....	9325
AMCOR.....	9115,9320,9321,9322,9323
Aidelong.....	9038,9039,9040
Aitue.....	9108,9109,9110
Akira.....	9046
Aoli.....	9194
Aoke.....	9129,9130
Aucma.....	9019,9020,9021,9022
AUX.....	9123,9124,9125,9126
.....	9127,9128,9191
Baixue.....	9131
Beijingjindian.....	9080
BELCOR CLASSIC.....	9115
Boerka.....	9065,9299
Borler.....	9134,9135
Bosgao.....	9115,9136,9137
Boshi.....	9313
Caixing.....	9002,9185,9186
Carrier.....	9003,9294,9295,9296
.....	9297,9298
Changfei.....	9187
Changhong.....	9003,9230,9237
.....	9238,9242,9253,9307
.....	9308,9309,9319
Changling.....	9004,9005,9006,9007
.....	9008,9009,9010,9011,9012,9189
Chuanghua.....	9115,9139
.....	9140,9288
Chunlan.....	9112,9203
Conrowa.....	9033,9041,9042
.....	9043,9044,9283
Corona.....	9255,9256,9257
.....	9258,9259,9260,9261,9262
Daewoo.....	9002,9033,9190,9191
Daikin.....	9284,9285,9286,9287
Dajinxing.....	9199,9200
Daotian.....	9180,9181
Diboer.....	9001,9002,9030,9031
Dongao.....	9001,9002,9030,9031
Dongxia.....	9115,9146,9148
Dongxibao.....	9082
Dunan.....	9003,9188
ELCO.....	9003
ELECTER.....	9002,9003,9115
.....	9325,9324
Falanbao.....	9001,9002
.....	9030,9031
Fedders.....	9205
Feigo.....	9288
Feiedrich.....	9204
Fujitsu.....	9272,9273
.....	9274,9275,9276
Geer.....	9196,9197
Galanx.....	9033,9079
Geweier.....	9001,9002,9030,9031
Geyang.....	9001,9002,9030,9031
Goldstar.....	9289
Gree.....	9095,9096,9190,9208
.....	9209,9210,9281,9282
Guangda.....	9115,9142,9143,9145
Guqiao.....	9119
Haier.....	9086,9186,9288,9291
Hisense.....	9028,9029
.....	9230,9233,9238
Hitachi.....	9006,9271
Huabao.....	9300,9301,9303
.....	9304,9305,9317,9318
Huagao.....	9001,9002,9030
.....	9031,9220
Huake.....	9154
Hualing.....	9031,9033,9052
.....	9053,9054,9119,9193
Huamei.....	9151
Huanghe.....	9081,9119
Huifeng.....	9059,9060,9061,9062
INYCIN.....	9002,9003,9030
.....	9031,9032,9033,9036,9037
.....	9079,9192
Jiale.....	9170
Jiangcheng.....	9001,9030
.....	9002,9031
Jiangnan.....	9198
JMSTAR.....	9149,9150
Jinbeijing.....	9157
Jinlu.....	9001,9002,9030,9031
Jinsong.....	9083,9084
Johson.....	9279
Jichun.....	9001,9002,9030,9031
Kangli.....	9088,9312
Keer.....	9001,9002,9030,9031
Kelong.....	9193,9266,9300
.....	9301,9302
Keming.....	9001,9002,9030,9031
Klimatair.....	9026,9189
Konka.....	9033,9158,9159
Kris.....	9179
MCQUAY.....	9292
Langge.....	9001,9002,9030,9031
LG.....	9204,9205,9206,9207
.....	9289,9290
LIANGYU.....	9003
LOREN-SEBO.....	9085,9189
MD.....	9003,9060,9201,9202,9207
Meidian.....	9001,9002,9030,9031

SETUP CODES FOR AC

Meiling.....	9296,9297,9298
Mingyi.....	9001,9002,9030,9031
Mitsubishi.....	9033,9055
.....	9056,9057,9058,9076,9080
.....	9192,9217,9220,9277,9278
.....	9279,9280,9283,9325,9503
National.....	9013,9115,9119,9120
NEC.....	9230,9231,9232,9233
.....	9234,9235,9236,9237
.....	9238,9239,9240,9241
.....	9242,9243,9244,9245
.....	9246,9247,9248,9249
.....	9250,9251,9252,9253
.....	9254
Nikko.....	9045
Ojun.....	9001,9002,9030,9031
OPAL.....	9115
Others.....	9064
Panasonic.....	9053,9054,9119
.....	9120,9121,9122
Panda.....	9092,9093,9094
Philips.....	9001,9002,9030
.....	9031,9114,9115,9116
Qidi.....	9133
Rayao.....	9306,9047,9048,9049
.....	9050,9051,9202,9261
RAYBO.....	9324
Rical.....	9160
Rijiang.....	9115,9161
Rowa.....	9063,9211,9212,9213
.....	9214,9215,9216,9217
.....	9218,9219,9220,9221
.....	9222,9223,9224,9225
.....	9226,9227,9228,9229
Saijo Denki.....	9296,9310,9311
Samsung.....	9023,9024,9025
.....	9028,9027,9189
Sandi.....	9132
Sanzuan.....	9165
SANYO NEC.....	9320,9321,9322,9323
Shangling.....	9033,9070,9071
.....	9072,9073,9074
SHARP.....	9115,9263,9264,9265
.....	9266,9267,9268,9269
Shenbao.....	9115,9163
Shengfeng.....	9013
Sacon.....	9115,9167
SHINING.....	9033
Sova.....	9303
STARWAY.....	9115
Sunburg.....	9065
TADIAIR.....	9320,9321,9322,9323
TADIRAN.....	9115,9320,9321
.....	9322,9323
TCL.....	9033,9079,9116,9117
.....	9118,9314
Teco.....	9086
Tianjinkongtiao.....	9175
Tianyuan.....	9105,9106,9107
Tobo.....	9066,9067,9068,9069
Tongyi.....	9001,9002,9030,9031
Toshiba.....	9003,9270
UNI-AIR.....	9088,9312
Wanbao.....	9102,9103,9104
Weili.....	9078,9087,9088
.....	9089,9090,9091
Weiteli.....	9195
Whirlpool.....	9115,9119,9279
Wufeng.....	9183,9184
SAST.....	9155,9156
UTTLEDUCK.....	9176,9177,9178
Xiayang.....	9001,9002,9030,9031
Xileng.....	9013,9111,9113,9186
FRESTECH.....	9115,9169
SHINCO.....	9099,9100,9101
.....	9173,9174
Xinle.....	9097,9098
YAIR.....	9000,9001,9002,9003
Yaoma.....	9171,9172
Yidazhou.....	9001,9002,9030
.....	9031
ELECTROLUX.....	9298,9316
York.....	9292,9293
Yutu.....	9013,9014,9015,9016
.....	9017,9018,9019,9033
.....	9308,9315
JINDA.....	9075
Zhongy.....	9182
Zuodan.....	9219

SETUP CODES FOR HTIB
(HOME THERTER IN A BOX)

AMW.....	015
APEX.....	011
BOSE.....	023
CENTERIOS.....	018,027,029
CLASSIC.....	031
CRITERION.....	014
DURABRAND.....	004,018
EMERSON.....	021
INSIGNIA.....	028
JVC.....	002
KLH.....	012
KOSS.....	005
LENOXX.....	022
LG.....	026
MAGXAXBOX.....	008
MYRON&DAVIS.....	025
NESA.....	025
NEXSTECH.....	018,027,028
NORCENT.....	016
ONKO.....	009
PANASONIC.....	003
PHILIPS.....	006
PIONEER.....	013,017
RADIO SHACK.....	001,007,018
RCA.....	018,020
REGENT.....	022
SABA.....	019
SAMSUNG.....	000,024
SELECTRON.....	030,033
SONY.....	010
TECHWOOD.....	032
TEVION.....	014